


## DOOR LOCKS AND RELEASE LEVERS



**Park (P)** should be engaged and the parking brake applied when the vehicle is stationary. The vehicle can move unexpectedly with any other gear position selected.

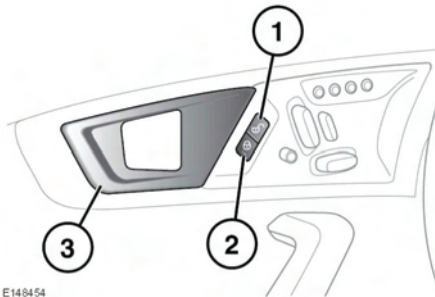

E148454

1. Press the unlock button to unlock the vehicle.

**Note:** Handles will automatically deploy on both doors.

2. Press the lock button to lock the vehicle.

**Note:** Handles will automatically retract to the flush position on both doors.

3. Pull the release lever to open the door.

**Note:** If the car was single-locked using the Smart key, then operating the release lever will only release that door and the alarm will sound.

If the vehicle has been double-locked, the interior door release levers will not operate. The vehicle must be unlocked using the Smart key.

## MISLOCK

If any of the doors, the bonnet or the luggage compartment are not shut fully when the vehicle is locked using the Smart key or by Keyless locking, the vehicle will not lock and 2 warning tones will sound. Check that both doors, the bonnet and the luggage

compartment are closed properly and lock the vehicle again.

## GLOBAL CLOSING



**Make sure that no children, pets, or obstructions are in any open aperture before operating global closing.**

Make sure that both doors are closed, then press and hold the lock button on the Smart key for 3 seconds. The vehicle will single-lock and the alarm will be fully armed immediately. After 3 seconds, all open windows will close.

## PERIMETER ALARM



**No modifications or additions should be made to the alarm system. Such changes could cause the system to malfunction.**

The perimeter alarm system is activated when the vehicle is single-locked. See **12, LOCKING AND ARMING THE ALARM**.

Once activated, the alarm system will sound if:

- The bonnet, luggage compartment or any door is opened.
- The vehicle battery is disconnected.
- An attempt is made to disconnect the alarm siren.

## FULL ALARM

The full alarm system is activated when the vehicle is double-locked. See **12, LOCKING AND ARMING THE ALARM**.

Once activated the alarm system will sound if:

- The bonnet, luggage compartment or any door is opened.
- Movement is detected within the vehicle interior.
- A window, windscreen or rear screen are broken.
- The vehicle is raised or tilted.