

*Single-point entry is the current setting and a door other than the driver's door is opened first, all doors will unlock.*

When all open doors have been closed, the system will search the vehicle interior for a valid Smart key. If one is not detected, **SMART KEY NOT FOUND REFER TO HANDBOOK** will be displayed in the Message centre. See **66, KEYLESS START BACKUP**.

*The security system fitted to your vehicle is Thatcham category 1 approved, and meets EU regulations 97/116 and EU directive 95/56 EC.*

**Instructional video** - Keyless entry and Keyless locking.



## GLOBAL OPENING

Press and hold the unlock button for 3 seconds. The vehicle will unlock and the alarm will be disarmed immediately. After 3 seconds, both of the windows will open. This feature can be enabled/disabled via the Instrument panel menu.

To stop the windows from opening/closing during the Global opening/closing operation, press any of the buttons on the Smart key or operate the driver's window switch. To stop a particular window from opening, operate the relevant window switch. For Global closing. See **13, GLOBAL CLOSING**.

## DRIVE-AWAY LOCKING

Locks both of the doors and retracts both deployed door handles, when the vehicle exceeds a predetermined limit, set via the Vehicle set-up menu from the Instrument panel menu list. See **31, INSTRUMENT PANEL MENU**.

**Note:** Drive-away locking can be enabled/disabled via the Vehicle set-up menu from the Instrument panel menu list. If disabled the deployed handles will retract when the vehicle reaches a speed of 8 km/h (5 mph).

Use of the central locking/unlocking buttons will override the Drive-away locking feature for the rest of a journey. See **206, DRIVER CONTROLS**.

If a door is individually unlocked and opened, both the doors will relock when the open door is subsequently closed.

## STEERING COLUMN LOCK

Your vehicle is fitted with an electronic steering column lock. The column unlocks when a Smart key is detected inside the vehicle.

If any malfunction of the steering column lock occurs, **STEERING COLUMN LOCKED** will be displayed in the Message centre. If this occurs:

1. Lock and then unlock the vehicle using the Smart key.
2. Try again to unlock the steering column lock, by turning the steering wheel gently to the left and right whilst locking and then unlocking the vehicle using the Smart key.
3. If the problem persists, seek qualified assistance immediately.