

## DISCONNECTING JUMP LEADS



To avoid serious injury use extreme caution when removing the jump leads as the engine will be running on the previously disabled vehicle. This means that you may be working close to components which are moving at high speed, carry high voltage, or may be hot.

**Note:** Do not switch on any electrical equipment until after the cables have been disconnected.

The engine should be running on the previously disabled vehicle and the engine switched off on the donor vehicle. Disconnect the jump leads in the exact reverse order of that used for connection.

## CONNECTING A STARTING AID



Do not connect the starting aid to any battery terminal on your vehicle. Doing so may cause a spark, which can result in an explosion. It may also result in damage to the charging system.

To start the vehicle using a starting aid or a slave battery, follow the instructions in the sequence given:

1. Connect the positive (Red) cable to the positive boost terminal of the disabled vehicle. See **147, CONNECTING JUMP LEADS**.
2. Connect the negative (Black) cable to the negative boost terminal of the disabled vehicle.
3. Connect/switch on the starting aid.
4. Start the engine and allow it to idle.
5. Disconnect/switch off the starting aid.

6. Disconnect the negative (Black) cable from the negative boost terminal of the vehicle. See **149, DISCONNECTING JUMP LEADS**.
7. Disconnect the positive (Red) cable from the positive boost terminal of the vehicle.

## CHARGING THE VEHICLE BATTERY



The battery must be disconnected and removed from the vehicle before charging.



Battery disconnection, removal and replacement, should only be carried out by qualified personnel. Consult your Dealer/Authorised Repairer.

## REPLACING THE VEHICLE BATTERY



Battery disconnection, removal and replacement, should only be carried out by qualified personnel. Consult your Dealer/ Authorised Repairer.



Used batteries must be disposed of correctly, as they contain a number of harmful substances. Seek advice from your Dealer/Authorised Repairer and/or your local authority.