

Starting the engine

ROLLING RE-START


Note: The engine **START/STOP** button will be inhibited for 2 seconds after the engine has been switched off.

A rolling restart can be initiated by selecting Neutral (**N**) and pressing the engine **START/STOP** button.

KEYLESS START BACKUP

If the vehicle has been unlocked using the emergency key blade or the Smart key is not detected by the vehicle, it will be necessary to use the keyless start backup to disarm the alarm and start the engine.

The keyless start backup can only be used when the message **Smart Key Not Found - Refer To Handbook** is displayed in the Message centre.

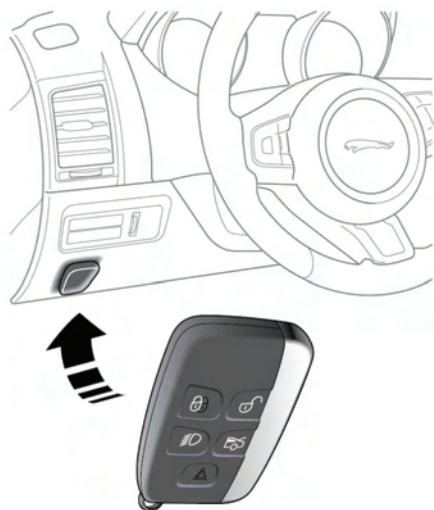

E149503

1. Position the Smart key flat against the fascia in the position shown.
2. Firmly depress the brake pedal.

3. Press and release the engine **START/STOP** button.

Once the engine has started, the brake pedal can be released if it is safe to do so.

If the Smart key is not recognised, or the engine still fails to start, consult a Dealer/Authorised Repairer.

IF THE ENGINE FAILS TO START

Note: If the engine fails to crank when the engine **START/STOP** button is pressed and there has been a recent collision, the fuel system inertia switch may have been tripped. Seek qualified assistance.

Make sure that the brake pedal is not depressed. Switch on the ignition and check the instrument panel for warning lamps and the Message centre for warning messages (see **31, INSTRUMENT PANEL MENU**).

Switch off the ignition.

To reset the immobiliser and alarm system use a valid Smart key to lock and unlock the vehicle (see **6, UNLOCKING THE VEHICLE**).

If the engine persistently fails to start.

1. Ensure the brake pedal is not depressed and that a valid Smart key is inside the vehicle.
2. Ensure that Park (**P**) or Neutral (**N**) is selected.
3. Press and hold the engine **START/STOP** button until the warning lamps illuminate.
4. Slowly depress the accelerator pedal fully and hold it in the fully depressed position.
5. Press and release the engine **START/STOP** button. The engine will begin to crank.
6. Release the accelerator pedal when the engine starts.

If the engine still fails to start, or fails to crank, consult a Dealer/Authorised Repairer.