


Video media player

VIDEO MEDIA PLAYER CONTROLS

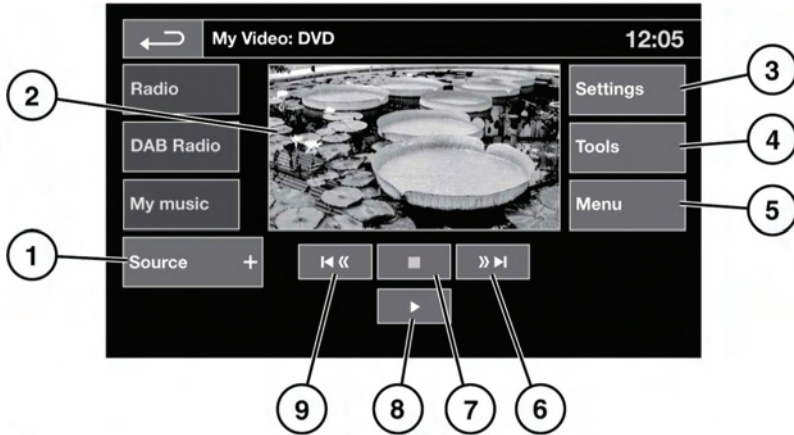

151162

- 1. Source:** Touch to view and select DVD or other forms of video media (CD/USB), provided the relevant media is present. The selected option will be displayed.

Note: After 5 seconds without use, the TV/My video menu will close.

- 2. Preview screen for video media information:** Touch to select full screen mode.

Short touch the screen again to view the controls at any time.

To return to preview mode, touch and hold the full screen view.

- 3. Settings.** Depending on the video media specification, there are 3 sub-menus within settings: **Options**, **VOD** (Video On Demand) and **Audio settings**.

VOD allows playing of DivX VOD content from a video media. The 8 digit registration code will be displayed when the VOD soft key is touched.

The player must also be registered with DivX. See **90, LICENSING**.

- 4. Tools:** The following options can be selected:

- **GOTO:** The GOTO menu allows you to access specific parts of the video, by **Chapter** or **Title number**.
- Subtitles.
- Angle.
- Audio.
- Top menu.

- 5. Menu:** Select to view the Video media menu. On some screens this may be replaced by a **Browse** soft key.
- 6. Seek up:** Select to view the next DVD chapter or the next chapter of the video media.
- 7. Select to pre-stop playback.** A second touch will stop and reset the DVD.
- 8. Select to start/restart play.**
- 9. Seek down:** Select to view the previous DVD chapter or previous chapter of the video media.