


# Parking aids

## USING THE PARKING AID

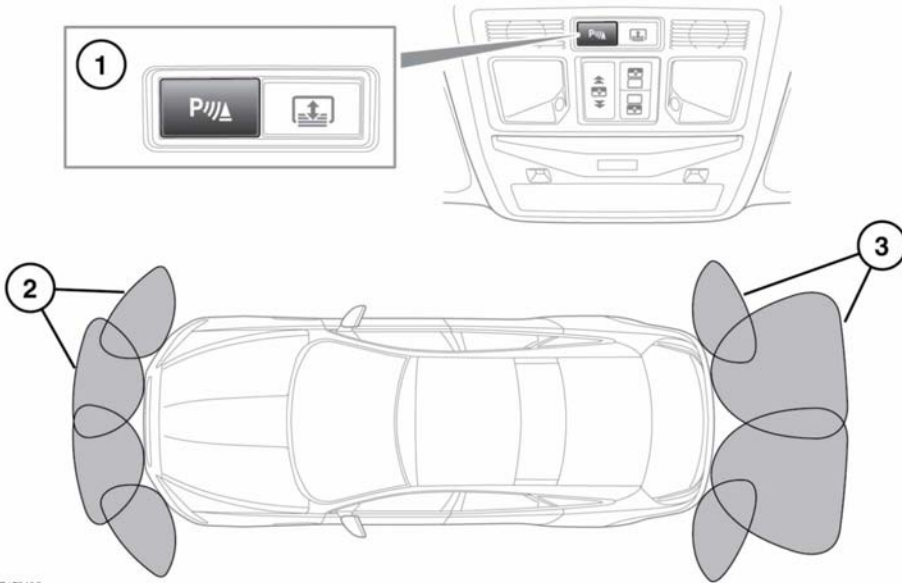

E 152430

**⚠** **Parking aids may not detect moving objects such as children and animals, until they are dangerously close. Always use extreme caution when manoeuvring.**

- !** Parking aid sensors may not detect some obstructions (e.g. narrow posts or small objects close to the ground).
- !** If accessories are fitted to the rear of the vehicle, particular care must be taken when reversing. The rear sensors will only indicate the distance from the bumper to the obstacle.

1. Parking aid switch: Press to turn on/off.
2. Front detection range.
3. Rear detection range.

When Reverse (**R**) is selected, the front and rear parking sensors are activated automatically, and the indicator on the parking aid switch will illuminate.

To manually activate the front sensors press the parking aid switch, the switch indicator will illuminate.

To turn off the system when active, press the switch, the switch indicator will extinguish.

The range of the parking aid sensors varies between the front, rear and corners of the vehicle.

The front sensors will remain active as long as the vehicle's forward speed does not exceed 16 km/h (10 mph).

Selecting **N** from **R** will keep front and rear sensors active.

When parking aid is active a pop-up appears on the Touch screen showing a plan view of the vehicle and the immediate surrounding area. Touch the screen to cancel the view.

**Note:** If a rear camera is fitted, when reverse gear is selected, the camera display is selected automatically. To view the parking aid display, touch the screen.

When objects are detected, the parking aid emits a warning tone which increases in frequency as the vehicle gets closer to the object and then becomes constant when the obstacle is within 300 mm (12 inches).

**Note:** The front parking aid provides an audible proximity warning when driving forwards and when reversing.

## CLEANING THE SENSORS



When washing the vehicle do not aim high pressure water jets directly at the sensors. Do not use abrasive materials or hard/sharp objects to clean the sensors. Only use approved vehicle shampoo.

The sensors should be kept clean to maintain accuracy and performance.

## PARKING AID SYSTEM FAULT

If a system fault is detected, a long high-pitched tone will sound, and the switch indicator will flash. Contact your Dealer/ Authorised Repairer as soon as possible.

## PARKING AID VOLUME

To set the volume of the parking aid warning tones:


- Select **Setup** from the touch screen Home menu, then select **System**.

- Select **Volume presets**, then use the + or - soft keys alongside Parking aid to adjust volume for both front and rear warning tones.

## REAR CAMERA



It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when reversing.


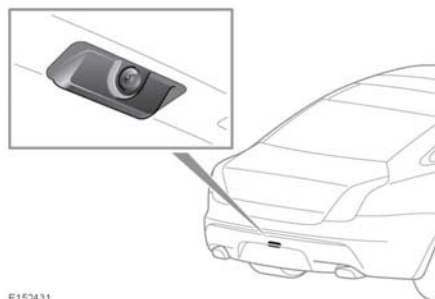


E152431

The rear view camera system provides a rear view image to assist in reversing the vehicle. Overlaid on the image are reversing guidelines.

When Reverse (R) gear is selected, the Touch screen automatically displays a wide angle, colour image from the rear of your vehicle.

# Parking aids

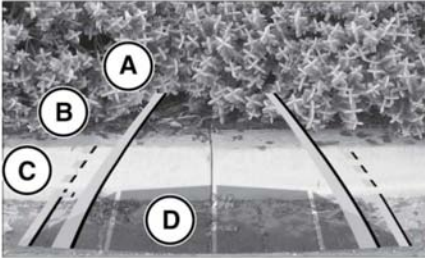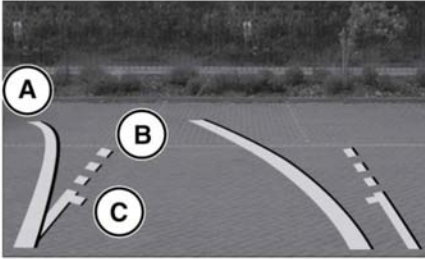

E142176

- A. Solid line: The projected wheel trajectory.
- B. Dotted line: The safe working width of the vehicle (including exterior mirrors).
- C. Boot access guidelines: Do not reverse past this point if access to the boot is required.
- D. Parking aid sensor activation: a coloured area appears to indicate which rear sensor(s) is active.

**Note:** The camera display has priority over the parking aid display. To view the parking aid display instead, touch the display.

The rear camera display on the Touch screen will discontinue when either of the following apply:

- Drive (D) is selected for longer than 15 seconds.
- Drive (D) is selected and/or vehicle speed is greater than 18 km/h (11 mph).