


# Video media player

## VIDEO MEDIA PLAYER CONTROLS

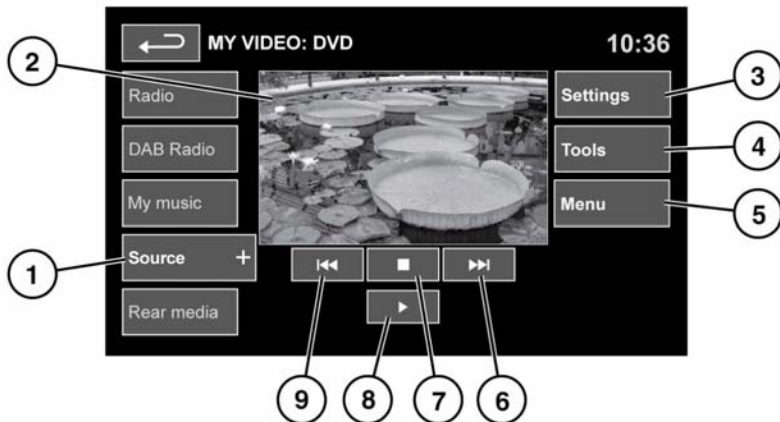

E151161



**In the interest of safety, only operate, adjust or view the system when it is safe to do so.**



**Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.**

1. **Source:** TV band/video input selection. Touch the + icon to view and select DVD or other forms of video media (CD/USB), provided the relevant media is present. The selected option will be displayed.

**Note:** After 5 seconds without use, the TV/My video menu will close.

2. **Preview screen for video media information:** Touch to select full screen mode. Short touch the screen again to view the controls at any time. To return to preview mode, touch and hold the full screen view.
3. **Settings.** Depending on the video media specification, there are 3 sub-menus within settings: **Options**, **VOD** (Video On Demand) and **Audio settings**.

**VOD** allows playing of DivX VOD content from a video media. The 8 digit registration code will be displayed when the VOD soft key is touched.

The player must also be registered with DivX. See **100, LICENSING**.

4. **Tools:** The following options can be selected:
  - **GOTO:** The GOTO menu allows you to access specific parts of the video, by **Chapter** or **Title number**.
  - Subtitles.
  - Angle.
  - Audio.
  - Top menu.
5. **Menu:** Select to view the Video media menu. On some screens this may be replaced by a **Browse** soft key.
6. **Seek up:** Select to view the next DVD chapter or to scroll through video media files.

7. Select to pre-stop playback. A second touch will stop and reset the DVD.
8. Select to start/restart play.
9. Seek down: Select to view the previous DVD chapter or to scroll through video media files.

For information on the CD/DVD loading slot and eject button, and the use of the audio/video controls on the audio unit and steering wheel, see **98, AUDIO/VIDEO CONTROLS**.

## VIDEO MEDIA INHIBIT WITH VEHICLE MOVING

When the vehicle is moving the video picture will automatically be inhibited. The touch screen will display the **TV/My video** screen and the relevant safety message will be displayed. If Dual view is fitted, a prompt for the passenger to activate dual view is displayed. See **118, DUAL VIEW**.

## FULL SCREEN VIEW

When full screen mode is selected, the seek controls operate in the same manner as they do in preview mode.

Use the relevant soft key to select the **4:3, 16:9** or **Zoom** option to magnify the picture.