

XFR-S tyre pressures - up to 250 km/h (155 mph)						
			4 occupants with luggage		Maximum Gross vehicle Weight (GVW)	
Petrol engine size	Tyre size	Load/speed index	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)
5.0L (SC)	265/35 ZR20	(99Y)	2.5 (36, 250)	-	2.5 (36, 250)	-
5.0L (SC)	295/30 ZR20	(101Y)	-	2.5 (36, 250)	-	2.5 (36, 250)

XFR-S tyre pressures - over 250 km/h (155 mph)						
			4 occupants with luggage		Maximum Gross vehicle Weight (GVW)	
Petrol engine size	Tyre size	Load/speed index	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)
5.0L (SC)	265/35 ZR20	(99Y)	2.8 (41, 280)	-	3.2 (46, 320)	-
5.0L (SC)	295/30 ZR20	(101Y)	-	2.8 (41, 280)	-	3.2 (46, 320)

NA - Naturally Aspirated, SC - Supercharged.

## TYRE VALVES

Keep the valve caps screwed down firmly to prevent water or dirt entering the valve. Check the valves for leaks when checking the tyre pressures.

-  Do not twist or bend the valves when attaching a pressure hose or gauge as damage may result.

## PUNCTURED TYRES

-  **Do not drive the vehicle with a leaking tyre. Even if the tyre appears to be inflated it could be dangerously under-inflated and will continue to deflate. Replace or contact an approved repairer.**

## REPLACEMENT TYRES

-  **Always fit replacement tyres of the same type, and wherever possible, of the same make and tread pattern.**
-  **Do not rotate tyres around the vehicle.**
-  **If the use of tyres not recommended by Jaguar is unavoidable, ensure that you read and fully comply with the tyre manufacturer's instructions.**

When the tread has worn down to approximately 2 mm, wear indicators start to appear at the surface of the tread pattern. This produces a continuous band of rubber across the tread as a visual reminder.