

XFR-S tyre pressures - up to 250 km/h (155 mph)						
			4 occupants with luggage		Maximum Gross vehicle Weight (GVW)	
Petrol engine size	Tyre size	Load/speed index	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)
5.0L (SC)	265/35 ZR20	(99Y)	2.5 (36, 250)	-	2.5 (36, 250)	-
5.0L (SC)	295/30 ZR20	(101Y)	-	2.5 (36, 250)	-	2.5 (36, 250)

XFR-S tyre pressures - over 250 km/h (155 mph)						
			4 occupants with luggage		Maximum Gross vehicle Weight (GVW)	
Petrol engine size	Tyre size	Load/speed index	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)
5.0L (SC)	265/35 ZR20	(99Y)	2.8 (41, 280)	-	3.2 (46, 320)	-
5.0L (SC)	295/30 ZR20	(101Y)	-	2.8 (41, 280)	-	3.2 (46, 320)

**NA** - Naturally Aspirated, **SC** - Supercharged.

## TYRE VALVES

Keep the valve caps screwed down firmly to prevent water or dirt entering the valve. Check the valves for leaks when checking the tyre pressures.



Do not twist or bend the valves when attaching a pressure hose or gauge as damage may result.

## PUNCTURED TYRES



**Do not drive the vehicle with a leaking tyre. Even if the tyre appears to be inflated it could be dangerously under-inflated and will continue to deflate. Replace or contact an approved repairer.**

## REPLACEMENT TYRES



**Always fit replacement tyres of the same type, and wherever possible, of the same make and tread pattern.**



**Do not rotate tyres around the vehicle. If the use of tyres not recommended by Jaguar is unavoidable, ensure that you read and fully comply with the tyre manufacturer's instructions.**

When the tread has worn down to approximately 2 mm, wear indicators start to appear at the surface of the tread pattern. This produces a continuous band of rubber across the tread as a visual reminder.