


# Navigation system

**13. TMC (Traffic Message Channel):** Not used for entering a destination but, when enabled, will provide data about road conditions and any events that may affect the journey.

**14. Stored locations:** Manages the stored locations.


## MAP SPLIT SCREEN

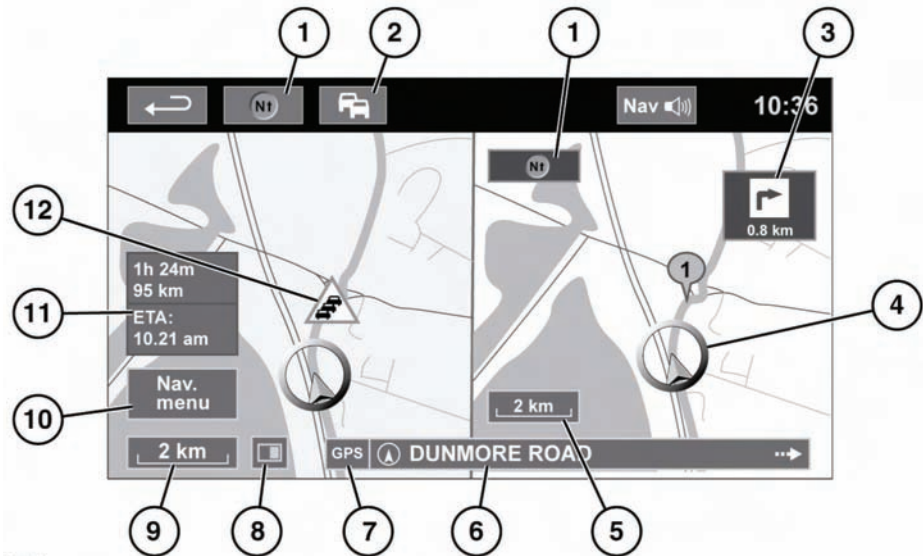

E141772

1. Compass: Press to select; north up, heading up or bird's eye map style.
2. TMC (Traffic Message Channel) signal: Without a diagonal bar, a signal is being received; with a diagonal bar, a signal is not being received.
3. Next direction display: When junction map view has been switched off, touch the icon to view again.
4. Current vehicle position and direction.
5. Right map view, scale/zoom setting.
6. Current location.
7. GPS signal indicator.
8. Screen selection.

9. Left map view, scale/zoom setting.
10. Opens the Navigation menu, 1 of 2 screens.
11. Distance/time to destination.
12. TMC event (traffic congestion).

 Touch to close the Junction and Motorway junction view. The previously displayed map is shown after closing.