
## **Navigation system**

- **13. TMC** (Traffic Message Channel): Not used for entering a destination but, when enabled, will provide data about road conditions and any events that may affect the journey.
- **14. Stored locations**: Manages the stored locations.

## MAP SPLIT SCREEN

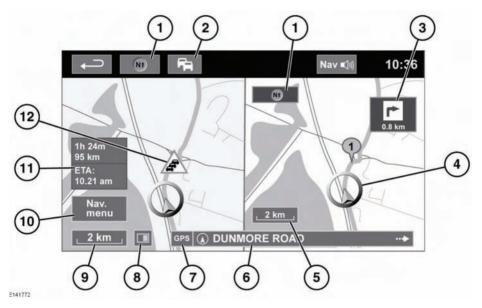

- 1. Compass: Press to select; north up, heading up or bird's eye map style.
- 2. TMC (Traffic Message Channel) signal: Without a diagonal bar, a signal is being received; with a diagonal bar, a signal is not being received.
- 3. Next direction display: When junction map view has been switched off, touch the icon to view again.
- **4.** Current vehicle position and direction.
- 5. Right map view, scale/zoom setting.
- 6. Current location.
- 7. GPS signal indicator.
- 8. Screen selection.

- 9. Left map view, scale/zoom setting.
- **10.** Opens the Navigation menu, 1 of 2 screens.
- 11. Distance/time to destination.
- **12.** TMC event (traffic congestion).



Touch to close the Junction and Motorway junction view. The previously displayed map is shown

after closing.