


Navigation system

13. TMC (Traffic Message Channel): Not used for entering a destination but, when enabled, will provide data about road conditions and any events that may affect the journey.

14. Stored locations: Manages the stored locations.

MAP SPLIT SCREEN

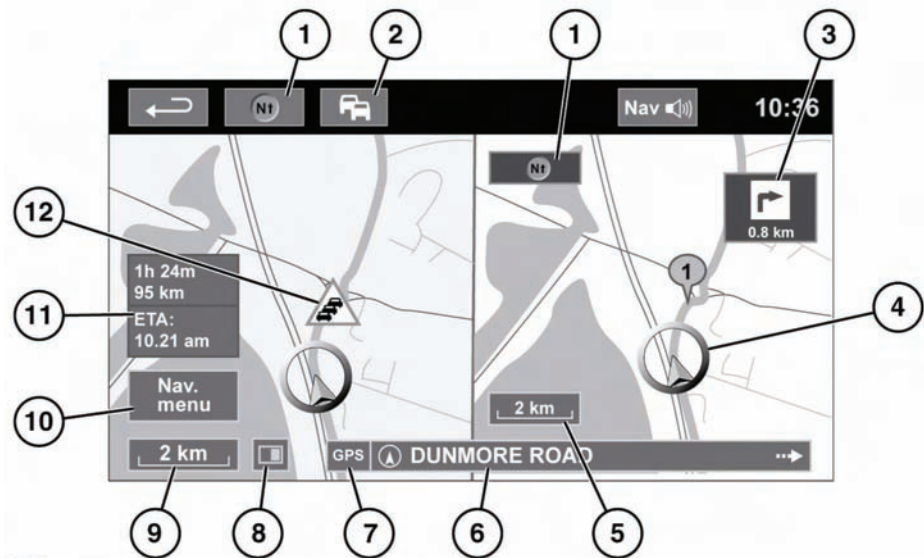

- E141772
1. Compass: Press to select; north up, heading up or bird's eye map style.
 2. TMC (Traffic Message Channel) signal: Without a diagonal bar, a signal is being received; with a diagonal bar, a signal is not being received.
 3. Next direction display: When junction map view has been switched off, touch the icon to view again.
 4. Current vehicle position and direction.
 5. Right map view, scale/zoom setting.
 6. Current location.
 7. GPS signal indicator.
 8. Screen selection.

9. Left map view, scale/zoom setting.

10. Opens the Navigation menu, 1 of 2 screens.

11. Distance/time to destination.

12. TMC event (traffic congestion).



Touch to close the Junction and Motorway junction view. The previously displayed map is shown after closing.