


INTERIOR LIGHTS

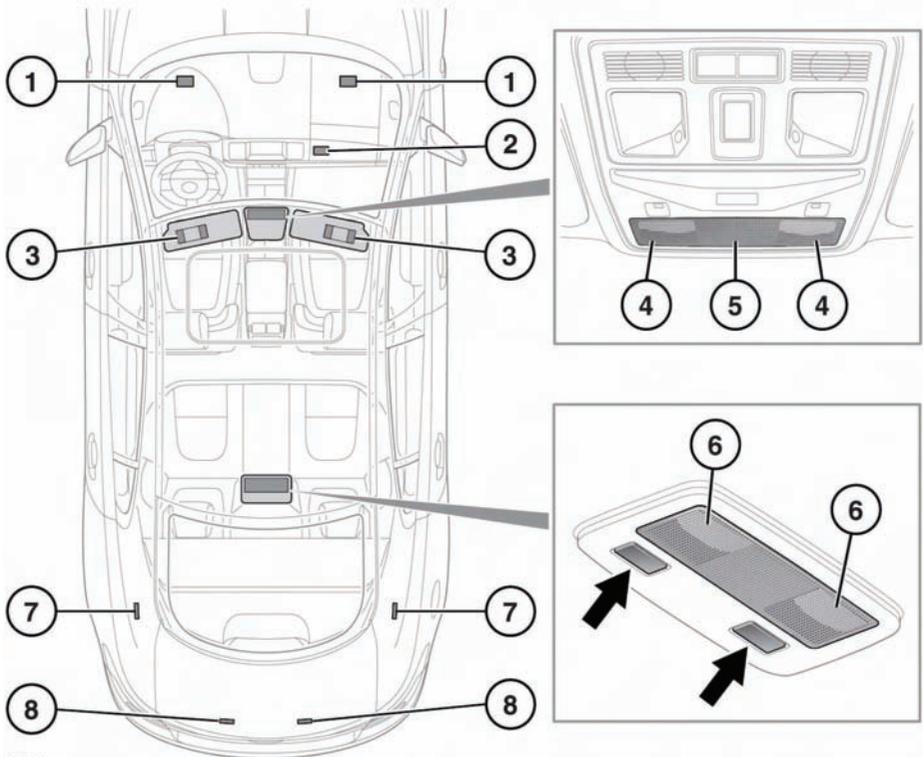

E143946

1. Front seat footwell illumination.
2. Glove box lamp.
3. Vanity mirror lamps.
4. Front reading lamps: Touch the lens briefly to switch on/off.
5. Front interior courtesy lamp: Illuminates when the doors are unlocked and extinguishes 30 seconds after all the doors are closed or when the vehicle is locked.
6. Rear interior and reading lamps: Switch on automatically when the doors are opened. Press the appropriate switch to activate a lamp manually.
7. Luggage compartment lamp: Press the switch briefly to switch on/off.
8. Rear door lamps. Sportbrake only.

The lamps are operated by proximity sensors. Move your finger close to (or touch) the appropriate lens to switch on/off. Touch the lens for 2 seconds to switch automatic illumination on/off

(**Manual mode** or **Auto mode** is displayed in the Message centre accordingly).

6. Rear interior and reading lamps: Switch on automatically when the doors are opened. Press the appropriate switch to activate a lamp manually.
7. Luggage compartment lamp: Press the switch briefly to switch on/off.
8. Rear door lamps. Sportbrake only.