

## SELECTING VALET MODE

Valet mode allows the vehicle to be locked by a parking attendant, without giving access to the loadspace and glove box. Valet mode also prevents operation of the touch screen, to prevent access to telephone numbers or navigation addresses.

1. From the **Home** menu, select **Valet**.
2. Enter a 4 digit Personal Identification Number (PIN) (personally chosen). On completion, touch the **OK** soft key.
3. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.
4. **Valet on** is displayed to indicate that the PIN has been accepted. The loadspace and glove box are now securely locked in Valet mode.
5. **Valet mode activated** is displayed to indicate that the PIN has been accepted.

The luggage compartment is now securely locked in Valet mode and the Valet mode On screen is displayed.

Remove and retain the emergency key before giving the Smart key to an attendant.

***Note:** The emergency key can be used to open the luggage compartment, which may deactivate Valet mode.*

## DESELECTING VALET MODE

1. When you re-enter the vehicle, select the Valet mode screen.
2. Enter your 4 digit PIN and touch the **OK** button.

**Valet mode deactivated** is displayed to indicate that your PIN has been accepted.

- The loadspace will return to the previously set security requirement.
- The touch screen will be enabled.

***Note:** If the PIN is forgotten, Valet mode can only be deactivated by your Dealer/Authorised Repairer.*