

6. Seek up: Select to view the next DVD chapter or next chapter of the video media.
7. Select to pre-stop playback. A second touch will stop and reset the DVD.
8. Select to start/re-start play.
9. Seek down: Select to view the previous DVD chapter or previous chapter of the video media.

For information on the CD/DVD loading slot and eject button and the use of the Audio/Video controls on the audio unit and steering wheel, see **104, AUDIO/VIDEO CONTROLS**.

## VIDEO MEDIA INHIBIT WITH VEHICLE MOVING

When the vehicle is moving the video picture will automatically be inhibited. The touch screen will display the **TV/My video** screen and the relevant safety message will be displayed.

## FULL SCREEN VIEW

When full screen mode is selected, the seek controls operate in the same manner as they do in preview mode.

Use the relevant soft key to select the **4:3, 16:9** or **Zoom** option to magnify the picture.