

6. Seek up: Select to view the next DVD chapter or next chapter of the video media.
7. Select to pre-stop playback. A second touch will stop and reset the DVD.
8. Select to start/re-start play.
9. Seek down: Select to view the previous DVD chapter or previous chapter of the video media.

For information on the CD/DVD loading slot and eject button and the use of the Audio/Video controls on the audio unit and steering wheel, see **104, AUDIO/VIDEO CONTROLS**.

## **VIDEO MEDIA INHIBIT WITH VEHICLE MOVING**

When the vehicle is moving the video picture will automatically be inhibited. The touch screen will display the **TV/My video** screen and the relevant safety message will be displayed.

## **FULL SCREEN VIEW**

When full screen mode is selected, the seek controls operate in the same manner as they do in preview mode.

Use the relevant soft key to select the **4:3, 16:9** or **Zoom** option to magnify the picture.