


RADIO CONTROLS

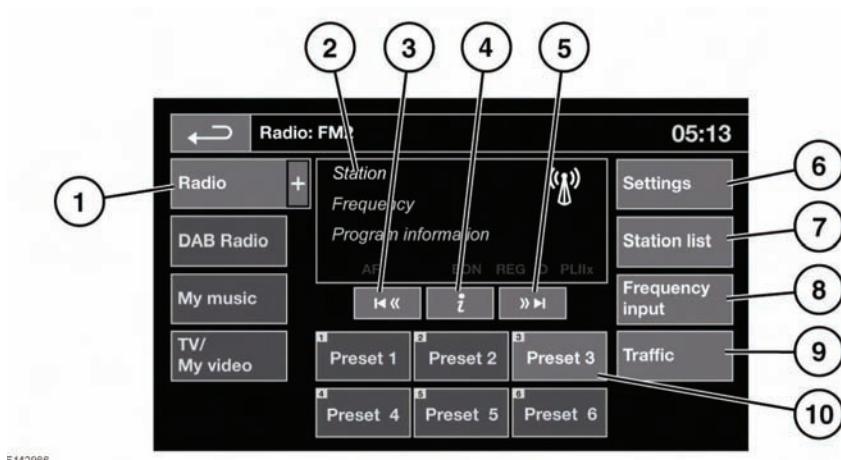

E142986



Do not adjust the main audio unit's controls, or allow the system to distract the driver while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.



Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

- 1. Radio:** Waveband selection. Touch to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close.

The waveband selection box will close automatically after 5 seconds without use.

- 2.** Displays information about the current station.
- 3. Seek down:**
 - Short touch to auto seek down the frequency to the next radio station.
 - Long touch to activate manual seek mode. Further short touches change the radio frequency in single decrements. A further long touch will

scan backwards through the current waveband until the soft key is released.

- 4.** Information. More information from the broadcasting station.
- 5. Seek up:**
 - Short touch to auto seek up the frequency to the next radio station.
 - Long touch to activate manual seek mode. Further short touches change the radio frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.
- 6. Settings:** Touch to view and activate/deactivate the following features: **RDS, Traffic, News, AF** and **REG**. See **110, RADIO DATA SYSTEM (RDS)**.
- 7. Station list (FM only):** Select to view a list of available stations on the waveband. The list can be sorted by **Frequency, Name** or **PTY** (pop, news, sport etc.) by selecting the appropriate soft key. Touch to select the chosen station.