

DIRECTION INDICATORS

In addition to normal operation, the indicators will operate 3 times (e.g. to indicate a lane change) if the stalk is briefly pushed up or down.

DAYLIGHT RUNNING LAMPS

With the rotary control in the **OFF** or **AUTO** position, the front daylight running lamps will switch on automatically with the following conditions:

- The ignition is on.
- The engine is running.
- The gear selector is in Drive (**D**) or Reverse (**R**) - market dependent.

***Note:** The lamps remain on if the gear selector is subsequently moved to Neutral (**N**).*

- The parking brake is not applied (is released) - market dependent.

APPROACH LAMPS

The headlamps can be illuminated remotely for a programmed length of time, by pressing the headlamp button on the Smart key. See **4, UNLOCKING THE VEHICLE**. Press the button again to switch off.

***Note:** In some markets, a second press will illuminate the reverse lamps and a third press is required to turn the lamps off.*

ADAPTIVE FRONT LIGHTING SYSTEM (AFS)

These lamps broaden the beam of the headlamps when cornering in different circumstances.

Static bending lamps: The static bending lamps operate when necessary, to provide an even broader light spread.

Cornering lamps: At speeds up to 40 km/h (25 mph), to provide improved visibility at junctions, the system switches on the lamp if it has received an input from the vehicle's direction indicator. Only the lamp on the same side as the operating indicator illuminates. The lamp will self cancel after 3 minutes of continuous operation.

WINDSCREEN WIPER DETECTION

This function only operates when **AUTO** lamps is selected. The side lamps, tail lamps and headlamps will switch on automatically if the windscreen wipers are operated for 20 wipes or more. Once the windscreen wipers are switched off, the side lamps, tail lamps and headlamps will automatically switch off 4 minutes later.

HIGH BEAM ASSIST

This feature automatically selects and deselects high beam, under specific conditions of road lighting and in the absence of other vehicle's lights. The system is active only when the ambient light drops below a pre-determined level.

This function is active only if the rotary control is in the **AUTO** position and the lighting control is in the central position.

The system will activate only when the vehicle speed exceeds 40 km/h (25 mph). The system will deactivate when the vehicle speed drops below 24 km/h (15 mph).

***Note:** High beam assist does not operate when Reverse (**R**) gear is selected.*

To manually select high beam, move the lighting control to the high beam position as normal. To return to High beam assist, move the lighting control back to the central position.

To manually override to low beam from High beam assist, pull the lighting control to the