

Starting the engine



If the brake pedal is applied when the engine **START/STOP** button is pressed, the engine will start.


ROLLING RE-START

A rolling restart can be initiated by selecting Neutral (**N**) and pressing the engine **START/STOP** button.

KEYLESS START BACKUP

If the vehicle has been unlocked using the emergency key blade or the Smart key is not detected by the vehicle, it will be necessary to use the keyless start backup to disarm the alarm and start the engine.

The keyless start backup can only be used when the message **Smart Key Not Found - Refer to Handbook** is displayed in the Message centre.

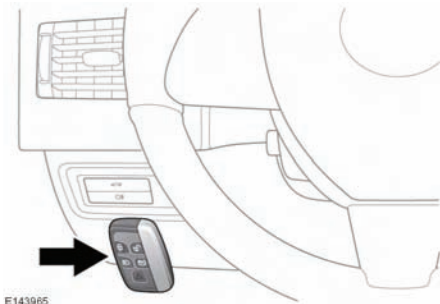

1. Position the Smart key flat against the fascia below the auxiliary switch pack in the position shown.
2. Firmly depress the brake pedal.
3. Press and release the engine **START/STOP** button.

Once the engine has started, the brake pedal can be released if it is safe to do so.

If the Smart key is not recognised, or the engine still fails to start, consult a Jaguar Dealer/Authorised Repairer.

IF THE ENGINE FAILS TO START

Note: If the engine fails to crank when the engine **START/STOP** button is pressed and there has been a recent collision, the fuel system inertia switch may have been tripped. Seek qualified assistance.

Make sure that the brake pedal is not depressed. Switch on the ignition and check the instrument panel for warning lights and the Message centre for warning messages. See **62, WARNING AND INFORMATION MESSAGES**

Seek qualified assistance if necessary.

To reset the immobiliser and alarm system use the valid Smart key to lock and unlock the vehicle.

Note: The following information applies to petrol engine vehicles only.

If the engine persistently fails to start.

1. Make sure that Park (**P**) or Neutral (**N**) is engaged. See **85, AUTOMATIC TRANSMISSION**.
2. Switch on the ignition without starting the engine. See **81, SWITCHING ON THE IGNITION**.
3. Slowly depress the accelerator pedal fully and hold it in the fully depressed position.
4. Firmly apply and hold the brake pedal. Press and release the engine **START/STOP** button. The engine will begin to crank.
5. Release the accelerator pedal when the engine starts.

Once the engine has started, the brake pedal can be released if it is safe to do so.

If the engine still fails to start, or fails to crank, consult a Dealer/Authorised Repairer.