

8. Eject: Press to eject a CD/DVD.
9. Rotate to adjust the volume.
10. Rotate and release repeatedly to scroll through:
 - The radio presets.
 - The previous track or start of next track on chosen audio source - CD, MP3 etc.
11. **MODE**: Press repeatedly to scroll through all the Audio/Video sources.
12. If Telephone and Voice control are not fitted, press to mute/un-mute audio. If Telephone is fitted, see **126, TELEPHONE SYSTEM OVERVIEW**. If Voice control is fitted, see **124, USING VOICE CONTROL**.

AUDIO SETTINGS


To view the audio settings menu, select the **Audio settings** soft key on the **Home menu** screen. See **64, TOUCH SCREEN HOME MENU**.

To adjust the sound settings

1. Touch the + or - soft keys to adjust the bass, treble or subwoofer levels.
2. If surround sound is fitted, touch **DPLIIx**, **DTS Neo:6**, **Meridian Trifield** or select **Off** to switch surround sound off.

Note: Surround sound options are not available for certain sources where the surround sound mode is set automatically.

To adjust balance and fade

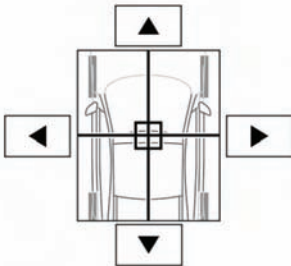

E132537

1. From the **Sound** settings menu, select **Balance/Fade**.
2. Touch the arrow soft keys to move the sound focal point to the desired area of the vehicle. Alternatively, touch the sound focal point and 'drag' it to the required position.

LOADING DISCS

- ⓘ Do not force the disc into the slot.
- ⓘ Do not use irregular shaped CDs or DVDs and those with a scratch protection film or self-adhesive label attached.
- ⓘ The CD unit will play compact discs that conform to the international Red Book standard audio specification. Playback of CDs not conforming to this standard cannot be guaranteed.
- ⓘ Recordable (CD-R) discs and re-writable (CD-RW) discs may not function correctly.
- ⓘ Recordable (DVD-R or DVD+R) discs may not function correctly.
- ⓘ Dual format, dual-sided discs (DVD Plus, CD-DVD format) are thicker than normal CDs and consequently playback cannot be guaranteed, and jamming may occur.

It is recommended that only high quality 12 cm (4.7 in.) circular discs are used.

The unit will play Compact Disc Digital Audio (CDDA) discs, MP3, WMA, WAV and AAC files.

The CD/DVD player will accommodate 1 CD or DVD disc at a time but up to 10 CDs can be uploaded onto the virtual store.

Only CDDA discs can be loaded into the virtual CD store.