


Heating and ventilation

CLIMATE CONTROL

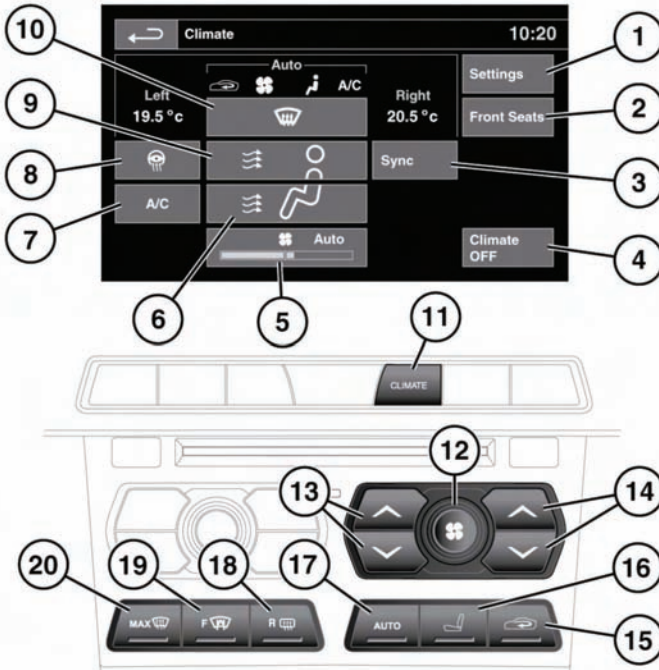

E152337

To access the Climate menu on the touch screen, select **Climate** from the home menu.

1. Touch to change the personal climate zone settings, to set the vent rotation mode and the automatic air recirculation sensor control settings.
2. Touch to access seat heating/ climate seat menu.
3. Touch to synchronize the passenger's climate zone to the driver's settings.
4. Touch to turn climate control off.
5. Indicates blower speed.
6. Touch to select air distribution to feet.
7. Air conditioning on. When the air conditioning is turned off, Economy mode is selected, which reduces the power consumed by the climate system.
Note: Prolonged use of Economy mode may cause the windows to mist.
8. Touch to select steering wheel heater on/off.
9. Touch to select air distribution to face.
10. Touch to select air distribution to the windscreen.
11. Press to short cut to touch screen climate menu.

Note: Not fitted on vehicles with the Navigation system.

12. Blower speed: Rotate to adjust blower speed.
Blower speed is automatically set in Auto mode. Adjusting the blower speed will cancel Auto mode.
Press centre button to switch climate system on/off.
13. Left-hand temperature control: Press to adjust temperature for the left side of the vehicle. The temperature is displayed on the touch screen (**HI** or **LO** is displayed when the maximum or minimum setting is selected).
Note: *The maximum possible temperature differential between left and right hand temperature settings is 3°C (5.4°F).*
14. Right-hand temperature control: Press to adjust temperature for the right side of the vehicle. The temperature is displayed on the touch screen (**HI** or **LO** is displayed when the maximum or minimum setting is selected).
15. Press briefly to select Timed recirculation. Press and hold to select Latched recirculation. Timed circulation will switch off automatically. Latched recirculation will continue until switched off. Press again to switch off. Recirculation may also be selected automatically in AUTO mode.
Note: *Prolonged use of recirculation may cause the windows to mist.*
16. Press to access seat heating/ climate seat menu.
17. AUTO control: Use as the normal operating mode. Press to switch automatic operation on/off.

If an air quality sensor is fitted and the climate control detects high levels of pollution outside the vehicle, recirculation may be selected automatically. Manual operation of the control will override the automatic setting.

18. Press to turn the heated rear screen on/off. The screen heater will switch off automatically after a timed period depending on the ambient temperature.
19. Press to turn the heated front screen on/off. The screen heater will switch off automatically after a timed period depending on the ambient temperature.
Note: *In cold ambient temperatures below 5°C (41°F), the screen heaters will automatically switch on when the engine is started unless the engine or vehicle interior is already warm.*
20. Defrost: Press to remove frost or heavy misting from the windscreen. This setting activates the blowers, air-conditioning, front and rear screen heaters and prohibits recirculation, to achieve a rapid defrost.

In addition to the selectable controls, the climate menu displays symbols that indicate the status of heating and ventilation functions.

Note: *If the climate control system is switched off, pressing an AUTO button or the Defrost button, will switch the climate system on.*

Note: *Water expelled by the air conditioning may collect underneath the vehicle when parked. This is not a cause for concern.*