

# Vehicle labels

## LABEL LOCATIONS




Warning labels attached to your vehicle bearing this symbol mean: Do not touch or adjust components until you have read the relevant instructions in the handbook.



Labels showing this symbol indicate that the ignition system utilises very high voltages. Do not touch any ignition components while the starter switch is turned on.

Additional information labels may also be found at these locations.

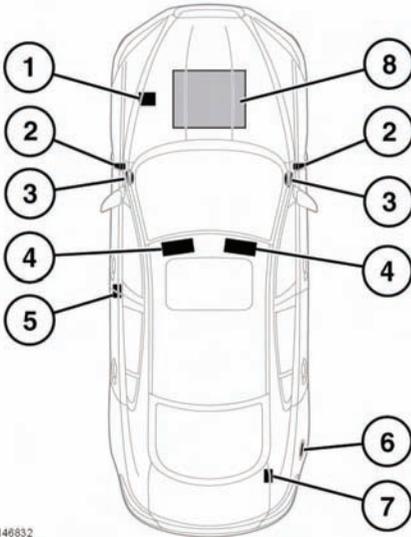

E146832

1. Left-hand front suspension tower - Air conditioning label.

2. Vehicle Identification plate, including the Vehicle Identification Number (VIN) and recommended maximum vehicle weights.

- **Left-hand A pillar:** All markets except China.
- **Right-hand A pillar:** China.

**Note:** The VIN number is also stamped on a plate, visible through the bottom left hand side of the windscreen.

3. End of fascia (passenger side) - Passenger airbag label.
4. Sun visor - Airbag label.
5. Base of left B pillar - Tyre pressure label, Airbag warning label.
6. Inner face of fuel filler flap - Fuel specification label.
7. Top face of battery - Battery warning symbols.
8. Engine number: 2.0L petrol, stamped into the engine mounting flange. All other engines, located on the front of the right-hand cam cover.

It is important that you are familiar with these subjects to ensure that your vehicle and its features are used safely. Using the index at the back of this handbook, refer to the relevant topic for more information.

## TRANSMISSION NUMBER

The transmission number is located on a label attached to the transmission casing.

## VEHICLE BUILD DATE PLATE

The vehicle built date is shown on the VIN plate.