

If the stations are sorted by category, touch the chosen category to view and select a corresponding station.

8. **Frequency input:** Select to enter a known frequency of a station on the current waveband, using the numeric keypad that appears. Select **OK** or wait for 2 seconds to tune to the entered frequency.
9. **Traffic** (Japan only): Touch to search for broadcasts on the 2 traffic information channels. If no traffic information is available, the previous frequency will resume.
10. **Station presets:** Each waveband has 6 preset positions.
  - Touch and release to tune to the station stored on that preset.
  - Touch and hold to store the current station on that preset (the radio will mute while the station is stored and then beep).
  - Use the seek buttons on the steering wheel to change to the next or previous preset station.

## RADIO DATA SYSTEM (RDS)

Your radio is equipped with RDS which enables the audio unit to receive additional information with normal FM radio signals.

**Note:** *Not all FM radio stations broadcast RDS information.*

Select **Settings** to view or alter RDS settings.

- **Traffic/News:** Provides local travel or news information.
- **Regionalisation (REG):** Select to prevent the radio tuning into an alternative local station that has a stronger signal.
- **Alternative Frequency (AF):** Select to allow the radio to automatically re-tune to a stronger alternative frequency for the current station. This is useful on a journey where the vehicle travels through different transmitter areas.