

# Heating and ventilation

## AUTOMATIC RECIRCULATION

If an air quality sensor is fitted, the climate control system will monitor exterior air pollution and humidity and select recirculation if either reaches a predetermined level. This feature only operates when the climate control system is in **AUTO** mode. The sensitivity of the air quality sensor can be set via the touch screen. See **70, AIR QUALITY SENSOR**.

Pressing the recirculation button will deactivate automatic recirculation.

## AIR QUALITY SENSOR

The sensitivity of the air quality sensor can be adjusted using the touch screen:

1. Select **Settings** from the **Climate** menu.
2. Touch the +/- buttons on the screen to increase/decrease sensitivity.

To switch off air quality sensing, decrease sensitivity to the minimum setting.



The auto recirculation icon appears on the touch screen when the air quality sensor is switched on.

## HEATED SEATS

**Note:** *The seat heaters will only operate when the engine is running.*

The heated seats are controlled through the touch screen.

To access the heating controls:

- Press the seat menu button on the fascia.
- Or, select the seat icon on the touch screen navigation bar.
- Or, from the Climate menu, select **Front seats**.

To adjust the seat temperature:

- Touch the relevant seat icon repeatedly, to select 1 of 3 temperature settings (as indicated by the red bars).

- If no bars are illuminated, the seat heaters are switched off.

## CLIMATE SEATS

**Note:** *The climate seats will only operate when the engine is running.*

Seat heating and ventilation is controlled from the **Home** or **Climate** menus on the touch screen or by the seat menu button.

Heated ventilation:

- Touch the red arrow icon to switch heated ventilation on at maximum (3 red bars).
- Touch the blue arrow icon once or twice to reduce the ventilation setting (2 and 1 red bars).
- Touch the blue arrow a third time to switch off seat ventilation.

Cooled ventilation:

- Touch the blue arrow icon to switch cooled ventilation on at maximum (3 blue bars).
- Touch the red arrow icon once or twice to reduce the ventilation setting (2 and 1 blue bars).
- Touch the red arrow a third time to switch off seat ventilation.

To select backrest ventilation only:

- Select **Settings** from the **Climate** menu.
- Select the appropriate icon for full seat or backrest only ventilation.