

## VOICE SETTINGS

- **Command list:** View the categories and the acceptable voice commands.  
Select an **Information** button to view alternative function commands.
- **Voicetags:** View the categories. Select a category to manage the voicetags for the chosen system. See **125, VOICETAGS**.
- **Operating guide:** View brief Voice system instructions. Select **Voice tutorial** for more detailed instructions (cancel via the displayed pop-up or by pressing and holding the voice button).
- **Preferences:** Select to alter the following settings:
  - **Voice profile:** The voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is **Standard**. To build a voice profile for either **User 1** or **User 2**, it is necessary to complete a training program first.  
To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.
  - **Voice feedback:** Select **On/Off**.
  - **Feedback volume:** Adjust using the +/- buttons. It is not possible to reduce the volume to zero.
- **Voice training:** Select to access the voice system training program, designed to enable the system to better recognise the vocal characteristics of a user.  
Select **User 1** or **User 2** and follow the on screen and audible instructions. See **125, VOICE TRAINING**.

The training session can be cancelled at any time by touching the on-screen pop-up or by pressing and holding the Voice button on the

steering wheel. See **124, USING VOICE CONTROL**.

## TRIP COMPUTER SETTINGS

**Trip Computer:** Select to switch trip computer readings between **Trip A**, **Trip B** and **Trip Auto**. Select **Reset** to zero the trip computer readings. Select **Units** to switch the trip computer readings between Imperial and Metric measurements.

## VEHICLE SETTINGS

Scroll down through the menu until the desired feature is displayed, then select **On** or **Off**, as appropriate.

- **Security:** Select to enable/disable or alter the settings of the following:
  - Single/multi-point entry (2 stage unlocking).
  - Alarm sensors (interior and tilt).
  - Drive-away locking.  
*Note: If drive-away locking is switched on, also select the desired activation speed, 8, 16 or 32 km/h (5, 10 or 20 mph).*
- **Windows/mirrors:** Select to enable/disable:
  - Global opening/closing of windows and sunroof.
  - Exterior mirror dip when reversing.
  - Automatic folding/unfolding of exterior mirrors when vehicle is locked/unlocked.
  - Interior mirror dimming.
- **Units:** Select to switch between Imperial and Metric measurements.
- **High beam assist:** Select to:
  - Turn High beam assist on or off.
  - Set High beam assist for the side of road being driven on.