VOICE SETTINGS

- **Command list**: View the categories and the acceptable voice commands.
 - Select an **Information** button to view alternative function commands.
- Voicetags: View the categories. Select a category to manage the voicetags for the chosen system. See 125, VOICETAGS.
- Operating guide: View brief Voice system instructions. Select Voice tutorial for more detailed instructions (cancel via the displayed pop-up or by pressing and holding the voice button).
- Preferences: Select to alter the following settings:
 - Voice profile: The voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is Standard. To build a voice profile for either User 1 or User 2, it is necessary to complete a training program first.

To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.

- Voice feedback: Select On/Off.
- Feedback volume: Adjust using the +/buttons. It is not possible to reduce the volume to zero.
- Voice training: Select to access the voice system training program, designed to enable the system to better recognise the vocal characteristics of a user.

Select **User 1** or **User 2** and follow the on screen and audible instructions. See **125**, **VOICE TRAINING**.

The training session can be cancelled at any time by touching the on-screen pop-up or by pressing and holding the Voice button on the

steering wheel. See 124, USING VOICE CONTROL

TRIP COMPLITER SETTINGS

Trip Computer: Select to switch trip computer readings between Trip A, Trip B and Trip Auto. Select Reset to zero the trip computer readings. Select Units to switch the trip computer readings between Imperial and Metric measurements

VEHICLE SETTINGS

Scroll down through the menu until the desired feature is displayed, then select **On** or **Off**, as appropriate.

- **Security**: Select to enable/disable or alter the settings of the following:
 - Single/multi-point entry (2 stage unlocking).
 - · Alarm sensors (interior and tilt).
 - Drive-away locking.

Note: If drive-away locking is switched on, also select the desired activation speed, 8, 16 or 32 km/h (5, 10 or 20 mph).

- Windows/mirrors: Select to enable/disable:
 - Global opening/closing of windows and sunroof.
 - Exterior mirror dip when reversing.
 - Automatic folding/unfolding of exterior mirrors when vehicle is locked/unlocked.
 - Interior mirror dimming.
- Units: Select to switch between Imperial and Metric measurements.
- High beam assist: Select to:
 - Turn High beam assist on or off.
 - Set High beam assist for the side of road being driven on.