


## TELEPHONE SYSTEM OVERVIEW

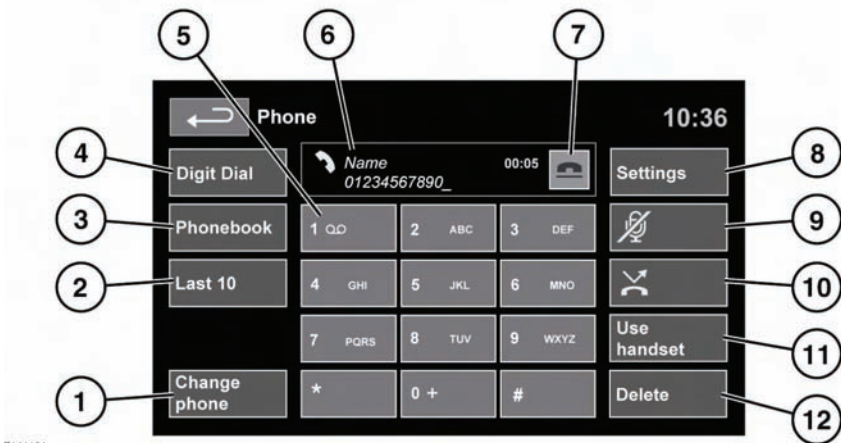

E141104

- 1. Change phone:** Search new or change to another paired phone.
- 2. Last 10:** Access the last 10 dialed, received and missed calls.  
*Note: The vehicle will display the list in the order that the calls were recorded. If this information is not available, they will be displayed as they are sent from the mobile phone. Some phones may arrange the list in reverse or other order.*
- 3. Phonebook:** Access the downloaded phonebook.
- 4. Digit Dial:** Access Digit Dial mode.
- 5.** Touch and hold to retrieve your Voice mail.
- 6. Status display:** Displays the name and/or number dialed and call duration.
- 7.** Call Connect/Disconnect icons. Touch to send/accept or end/reject a call.
- 8. Settings:** Access Voice mail setup, Answer options and Phone options.
- 9. Mute microphone:** Initiate Privacy mode. While selected, the caller will not hear you talking.

- 10. Auto reject:** When active, any incoming calls will be rejected or diverted to voice mail (depending on mobile phone settings).
- 11. Use handset:** Switch the call to your mobile phone.
- 12. Delete:** Touch to delete the last entered digit and hold to delete the whole entered number.



**PHONE** hard button: Press for shortcut to touch screen **Phone** menu (applicable to Bluetooth® wireless technology phones only). See **230, DRIVER CONTROLS**.