LEARN ROUTE

In Route options, Learn Route can be turned On or Off.

When **On** is selected, if you make the same deviation from the proposed route 3 times, then the system will memorise the deviation and offer that as the normal route from then on. Select **Reset all routes** to delete any learnt routes and return to the default settings.

VOICE GUIDANCE

To turn voice guidance on or off but maintain route guidance, proceed as follows:

- 1. Touch Nav menu on the navigation screen.
- 2. Touch the **Route voice guidance** soft key. The soft key will be highlighted when voice guidance is enabled.

CANCEL ROUTE GUIDANCE

To cancel route guidance, proceed as follows:

- 1. Touch Nav menu on the navigation screen.
- $\begin{tabular}{ll} \textbf{2.} & \textbf{Touch the Cancel guidance} & \textbf{soft key}. \end{tabular}$

QUICK POI SELECTION

- **1.** Touch the map to display the additional options.
- 2. Touch the **Point of interest** (POI) soft key.
- **3.** The screen shows 6 suggested categories, 5 of which can be selected as a POI.
- Select a Quick POI category, or touch More to see further POIs. Touch OK to confirm a selection.
- The map with the POI icon(s) is displayed. Scroll the map to the POI icon and then touch **Set destination** to set and calculate the route.
- **6.** Touch **GO** to start the journey.

RESTORE SYSTEM DEFAULTS

From the Nav menu screen, select Nav set-up. If you have made any changes to the system's default settings, use this menu to restore the original settings.

FAVOURITES

This enables you to manage destinations such as, place of work, home, favourite restaurant.

From the favourites sub-menu in stored locations, you can save up to 400 stored favourites.

Use favourites to add your home address as a stored favourite.

- 1. From the Nav menu screen, select Stored locations.
- 2. Touch Favourite.
- **3.** To store a favourite, select **Add** from the sub-menu.
- **4.** Select any destination entry method and confirm the desired location.

FAVOURITES DETAILS

- 1. From the **Stored locations** menu, select **Favourite**.
- 2. Select Edit or Delete.
- **3.** Touch the selected favourite to display the details.
- Select the chosen detail to edit. Details include Attribute, Name, Phone number, Location and Icon.

HOME

- 1. From the Nav menu screen, select Stored locations.
- 2. Touch Home location.
- **3.** To store a home location, select **Add** from the sub-menu.