# **Maintenance**



Do not allow tools or metal parts of the vehicle to make contact with the battery leads or terminals.

### **FUEL SYSTEM**



Under no circumstances should any part of the fuel system be dismantled or replaced by anyone other than a suitably qualified vehicle technician.



Ensure sparks and naked lights are kept away from the engine compartment.



Wear protective clothing, including, where practicable, gloves made from an impervious material.

#### **USED ENGINE OIL**

Prolonged contact with engine oil may cause serious skin disorders, including dermatitis and cancer of the skin. Always wash thoroughly after contact.

#### OPENING THE BONNET



Do not attempt to open the bonnet if the pedestrian protection system has deployed.



- 1. Pull the handle located in the left side front footwell to release the 2 bonnet locks.
- 2. Lift the safety catch lever located below the centre point of the bonnet and then raise the bonnet.

## **CLOSING THE BONNET**



Do not drive with the bonnet retained by the safety catch alone.

- Lower the bonnet until the safety catch engages. Using both hands, press the bonnet down until the 2 locks click.
- Check that both locks are fully engaged by attempting to lift both sides of the front edge of the bonnet. This should be free from all movement.