

The radar monitored area extends to approximately 6 metres (20 ft) behind the rear wheels and up to 2.5 metres (8.2 ft) from the side of the vehicle. An approximate lane width is monitored on each side of the vehicle. If the lanes are narrower than a typical carriageway lane, objects travelling in non-adjacent lanes (4) may be detected.

Note: *If overtaking vehicles are detected on both sides of the vehicle simultaneously, the warning icons in both mirrors will illuminate.*

BSM automatically switches on and becomes active when the vehicle is travelling at more than 16 km/h (10 mph) in a forward gear. When the system initiates, it performs a self-check, during which the warning icons in the mirrors illuminate alternately for a short period of time.

Note: *When transmission **R** or **P** is selected, or the vehicle is travelling below 16 km/h (10 mph), BSM is turned off and the amber warning indicator (3) is displayed.*

BSM SENSORS

The BSM system will automatically disable if either of the sensors become completely obscured, an amber warning indicator dot (2) is displayed in the exterior mirror and the message **BLIND SPOT MONITOR SENSOR BLOCKED** appears in the Message centre.

Note: *Blockage testing is only initiated when the vehicle's speed is above 32 km/h (20 mph) and will take at least 2 minutes of accumulated driving above this speed, to determine that the sensor is blocked.*

If the sensors become blocked, then please check that there is nothing obscuring the rear bumper and that it is clear from ice, frost and dirt.

If a fault with one of the sensors is detected, the amber warning indicator dot is displayed in the exterior mirror and the message **BLIND SPOT MONITOR NOT AVAILABLE** is displayed in the Message centre.

Note: *Even if the detected fault only affects the sensor on one side of the vehicle, the whole system is disabled. If the fault is temporary, the system will operate correctly once the engine has been switched off and then on again.*

If the fault remains after switching off and on again, consult a Dealer/Authorised Repairer.