


CLIMATE CONTROL

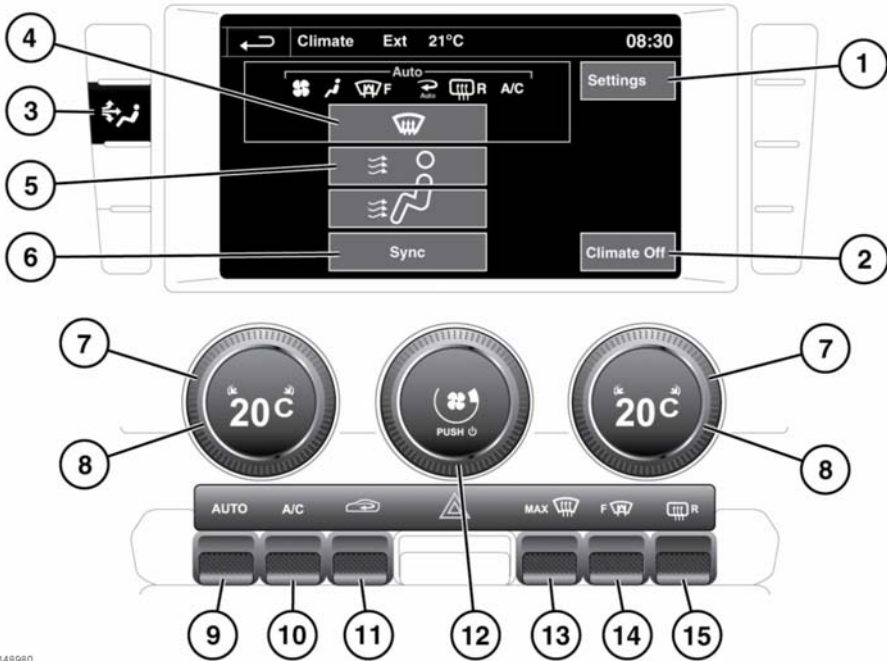

E148980


1. Climate control **Settings** menu.
2. Climate control system on/off.
3. Shortcut to the Climate menu.
To access the Climate menu from the Touch screen Home menu, setup **Climate** as a shortcut. See **59, TOUCH SCREEN HOME MENU**.
4. Distributes air to the windscreen.
5. Air distribution.
Note: More than one setting may be selected, at a time, to achieve the desired distribution.

- When AUTO is selected, the deployable centre vents will open in face only mode, or in face/foot mode when additional airflow is required to maintain the selected temperature.

The deployable centre vents can be set to AUTO to always open via the Climate control Settings menu.

Note: The deployable centre vents will always close when the Climate control system is switched off or when the ignition is switched off.

6. Synchronise driver and passenger climate zone settings.

7. Temperature controls: For individual driver/passenger settings. Rotate to change the temperature.
 8. Press to access the heated seats. See **63, HEATED SEATS**.
 9. **AUTO** mode: For fully automatic operation. The Climate control system will adjust blower speed, air intake, and airflow distribution to maintain the selected temperature.
The deployable centre vents may open or close dependent on the selected temperature.
Windscreen fogging will be reduced.
 10. Air conditioning: Press to turn the system on/off.
 11. Recirculation: Press for timed recirculation. Press and hold for latched (continuous) recirculation. To cancel recirculation, press the button again.
Note: Prolonged use at low temperatures may cause the windows to mist.
 12. Blower speed control. In manual mode, rotate to change the speed; the current speed selection is indicated in the integrated screen on the blower speed control. Press to switch off Climate control.
 13. Maximum defrost program.
 14. Heated windscreen. The heated windscreen will deactivate after a predetermined length of time.
 15. Heated rear screen. The heated rear screen will deactivate after a predetermined length of time.
-  Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the screen.

Note: The indicator lamps will illuminate when a function is selected.

Note: In low temperatures, it is advisable to close the centre face-level vent and direct air flow from the outer face-level vents towards the side windows. This will help to keep the windows clear of ice.

Note: The Climate control system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form, but this is normal and no cause for concern.

AUTOMATIC RECIRCULATION

If an Air quality sensor is fitted, the Climate control system will monitor exterior air pollution and humidity, and select recirculation if either reaches a predetermined level. This feature only operates when the Climate control system is in **AUTO** mode. The sensitivity of the air quality sensor can be set via the Touch screen.

Pressing the recirculation button will deactivate Automatic recirculation.

AIR QUALITY SENSOR

The sensitivity of the Air quality sensor can be adjusted using the Touch screen:

1. Select **Settings** from the **Climate** menu.
2. Touch **Low**, **Medium**, or **High** on the screen to increase/decrease sensitivity.

Select to switch off Air quality sensing.



The Auto recirculation icon appears on the Touch screen when the Air quality sensor is switched on.

HEATED SEATS

Note: The seat heaters will only operate when the engine is running.

Press the rotary dial (8) to select the heated seat. Rotate clockwise to select a temperature of low, medium, or high.

Heating and ventilation

Rotate the rotary dial counter-clockwise to turn the heated seat off.

Instructional video - Climate control.



E151785