



## STARTING THE ENGINE

 **Never start the engine, or leave it running, when the vehicle is in an enclosed space. Exhaust gases are poisonous and can cause unconsciousness and death, if inhaled.**

 If the engine fails to start, do not continue cranking as this will discharge the battery. It may also damage the catalytic converter due to unburnt fuel passing through the exhaust.

**Note:** *The Smart key may not be detected if it is placed within a metal container, or if it is shielded by a device with a back-lit LCD screen such as a smart phone, laptop (including when inside a laptop bag), game console, etc. Keep the Smart key clear of such devices when attempting Keyless entry or Keyless starting.*

### To start the engine:

1. Make sure that a valid Smart key is inside the vehicle.
2. Make sure that Park (P) or Neutral (N) is selected.
3. Firmly press the brake pedal.
4. Press and release the engine **START/STOP** button.


Once the engine has started, the brake pedal can be released, if it is safe to do so.

## SWITCHING OFF THE ENGINE

### While the vehicle is stationary:


1. Make sure that the vehicle is parked with Park (P) selected and the Parking brake applied.
2. Press and release the engine **START/STOP** button.

### While the vehicle is moving:

 It is not advisable to switch off the engine while the vehicle is moving. However, if a situation arises where engine switch off is urgent, the following procedure applies:

1. Press and hold the engine **START/STOP** button for 2 seconds, or
2. Press and release the engine **START/STOP** button twice within 3 seconds.

## SWITCHING ON THE IGNITION

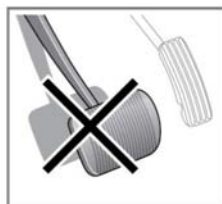

E142753



### To switch on the ignition without starting the engine:

1. Make sure that the brake pedal is not pressed and that a valid Smart key is inside the vehicle.
2. Press and hold the engine **START/STOP** button until the warning lamps illuminate.
3. Release the engine **START/STOP** button.

 If the brake pedal is applied when the engine **START/STOP** button is pressed, the engine will start.

## ROLLING RE-START

**Note:** *The engine **START/STOP** button will be inhibited for 2 seconds after the engine has been switched off.*


A rolling re-start can be initiated by selecting Neutral (N) and pressing the engine **START/STOP** button.

# Starting the engine

## KEYLESS START BACKUP

If the vehicle has been unlocked using the emergency key blade, or the Smart key is not detected by the vehicle, it will be necessary to use the Keyless start backup to disarm the alarm and start the engine.

The Keyless start backup can only be used when the message **Smart Key Not Found - Refer To Handbook** is displayed in the Message centre.

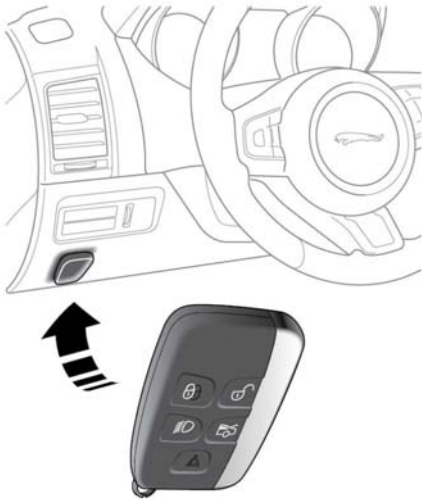

E149503

1. Position the Smart key flat against the fascia, in the position shown.
2. Firmly press the brake pedal.
3. Press and release the engine **START/STOP** button.

Once the engine has started, the brake pedal can be released, if it is safe to do so.

If the Smart key is not recognised, or the engine still fails to start, consult a Dealer/Authorised Repairer.

## IF THE ENGINE FAILS TO START

**Note:** If the engine fails to crank when the engine **START/STOP** button is pressed and there has been a recent collision, the fuel system inertia switch may have been tripped. Seek qualified assistance.

Make sure that the brake pedal is not pressed. Switch on the ignition and check the Instrument panel for warning lamps and the Message centre for warning messages (see **35, INSTRUMENT PANEL MENU**).

Switch off the ignition.


To reset the immobiliser and alarm system, use a valid Smart key to lock and unlock the vehicle (see **6, UNLOCKING THE VEHICLE**).

### If the engine persistently fails to start:

1. Make sure the brake pedal is not pressed and that a valid Smart key is inside the vehicle.
2. Make sure that Park (**P**) or Neutral (**N**) is selected.
3. Press and hold the engine **START/STOP** button until the warning lamps illuminate.
4. Slowly press the accelerator pedal fully and hold it in the fully pressed position.
5. Press and release the engine **START/STOP** button. The engine will begin to crank.
6. Release the accelerator pedal when the engine starts.

If the engine still fails to start, or fails to crank, consult a Dealer/Authorised Repairer.

## ACTIVE EXHAUST

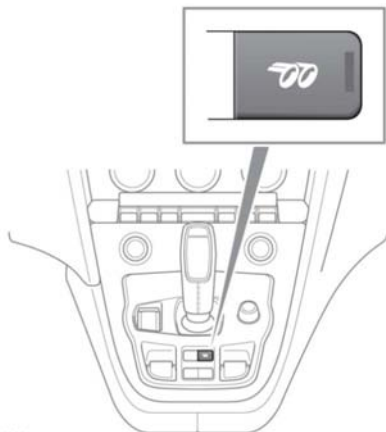

E149323

For vehicles with Active exhaust, this system will operate valves in the exhaust, to produce a richer and louder noise to enhance the driving experience.

**Note:** Active exhaust is automatically selected when the vehicle is in Dynamic mode.

Press the switch to engage Active exhaust system. The switch lamp will illuminate to confirm.

Press the switch again to disengage the Active exhaust. The switch lamp will extinguish to confirm.

**Note:** Active exhaust will be disengaged at the start of each ignition cycle.

## ENGINE BLOCK HEATERS



The fitting of an engine block heater does not eliminate the need for antifreeze.

Engines are more difficult to start when the ambient temperature is very low. In geographical areas where temperatures below  $-10^{\circ}\text{C}$  ( $14^{\circ}\text{F}$ ) are experienced frequently, it is advisable to fit an engine block heater. The block heater will have an insulated connector at the front of the vehicle, which is connected to a mains supply using a suitable extension cable. The heater can remain in use overnight, if required. Typically, an engine block heater will use between 0.4 and 1 kWh.

For further information, consult a Dealer/Authorised Repairer.