


LUGGAGE COMPARTMENT EMERGENCY RELEASE

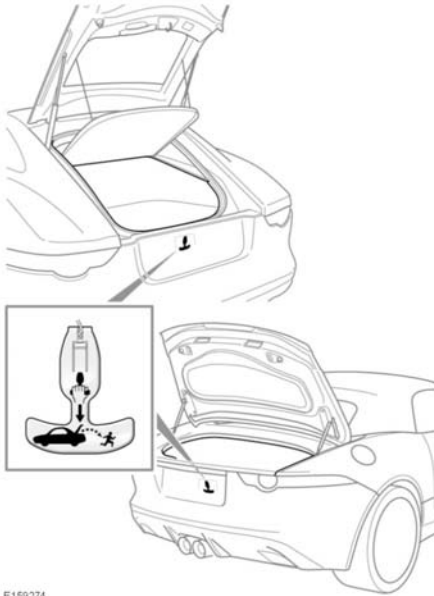

The mechanical Luggage compartment release provides a means of escape in the event of someone being locked in the Luggage compartment. Adults are advised to familiarise themselves with the operation of the release handle.

The release handle glows in the dark and is located inside the Luggage compartment, as illustrated. To open the Luggage compartment from the inside, pull the handle while pushing the Luggage compartment lid/tailgate upwards. Return the handle to its stowage position after use.

LUGGAGE COMPARTMENT COVER



The Luggage compartment cover will lift and close with tailgate movement, unless the left and right Luggage compartment straps are released from the tailgate pins, as illustrated.



Never place objects on top of the Luggage compartment cover. During an accident or sudden manoeuvre, loose objects can cause serious injury or death.

The Luggage compartment cover can be removed, if required.

1. With the tailgate open, release the left and right Luggage compartment straps from the tailgate pins.
2. Pull the Luggage compartment cover rearwards, to release the retaining brackets on the edges of the cover from the pins on the Luggage compartment side trim.


Note: *Installation of the Luggage compartment cover is the reverse of the removal procedure.*

Luggage compartment



Do not store the Luggage compartment cover loose in the vehicle. During an accident or sudden manoeuvre, the cover could cause serious injury or death.

LUGGAGE ANCHOR POINTS

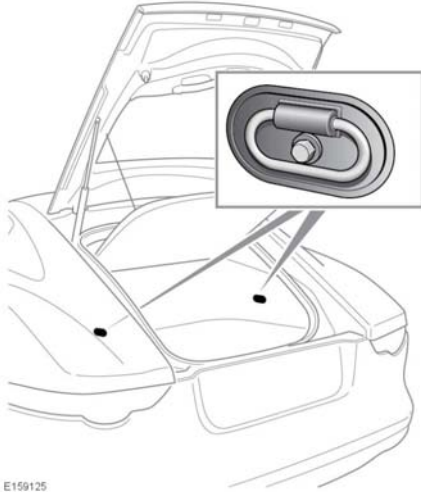

E159125



All items carried in the vehicle should be properly secured.

Coupe vehicles have 2 anchor points in the Luggage compartment, as illustrated, to assist in safely securing items.

Note: A range of approved luggage retention accessories are available from a Dealer/Authorised Repairer.