


TOUCH SCREEN HOME MENU

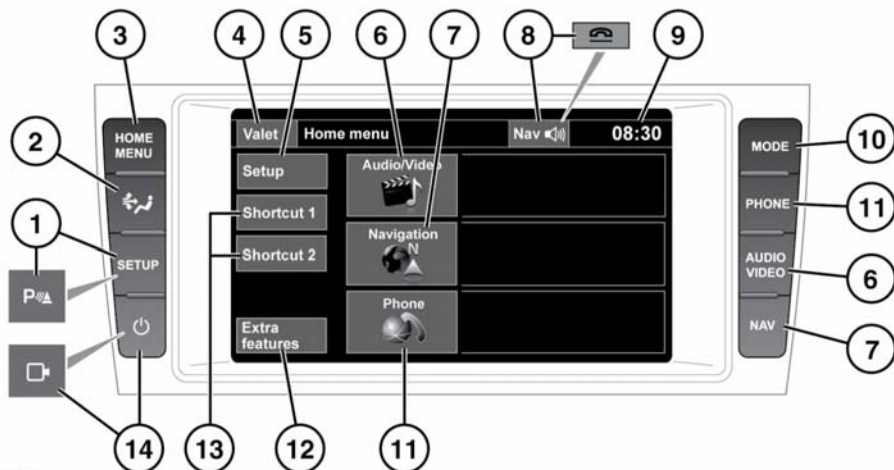

E149032

⚠ Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

! Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery, preventing the engine from starting.

! Avoid spilling or splashing liquids onto the Touch screen.

Note: The Touch screen **Home menu** may differ due to the vehicle's specification and previous **Setup** selections.

1. Press to select the Touch screen **Setup** menu. When Parking aids are fitted, press the button to turn the system on/off.
2. Press to select the **Climate** menu.
3. Press to select the **Home** menu.

4. Touch to select **Valet** mode. During menu mode, the icon is changed to the back soft key; touch to return to the previous screen displayed.
5. Touch to select the Touch screen **Setup** menu.
6. Touch or press to select the **Audio/Video** menu. See **97, AUDIO/VIDEO CONTROLS**.
7. Touch or press to select the **Navigation** menu. The current set destination is displayed. See **124, MAIN MENU**.
8. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
9. Touch to adjust the time/date.
10. **MODE:** Press repeatedly to scroll through all audio/video sources.

Note: The current mode selection will also appear in the Message centre.

11. Touch or press to select the **Phone** menu.

Touch screen

12. Touch to select the **Extra features** menu.
13. Touch to select a predetermined shortcut menu (if enabled).
Use the **Setup** and **System** menus to enable/disable, choose or change which menus are displayed on the **Home menu** screen. See **60, SYSTEM SETTINGS**.
14. Press to turn the Touch screen on or off. When a rear camera is fitted, press the button to turn the rear camera on/off.

Instructional video - Operating the Touch screen.



E151784

TOUCH SCREEN USE

- ⚠ Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery, preventing the engine from starting.
- ⚠ Avoid spilling or splashing liquids onto the Touch screen.

TOUCH SCREEN CARE

- ⚠ Do not use abrasive cleaners on the Touch screen. For approved cleaning products, contact your Dealer/ Authorised Repairer.

TOUCH SCREEN SETUP

Select **Setup** from the **Home menu**.

The Setup screen is divided into categories:

- **Screen.**
- **System.**
- **Audio.**

SCREEN SETTINGS

- **Volume pop-up:** Display's a volume pop-up on/off icon.
- **Screensaver:** Change screensaver.
- **Time out home:** Sub-menu selection screens can be set to revert to the **Home menu** after a predetermined length of time.
- **Theme:** Changes appearance of the Touch screen soft keys.

SYSTEM SETTINGS

- **Button feedback:** Select to turn the soft key confirmation tone on/off.
- **Clock adjust:** Select the **12** or **24** hour clock. Set the current time. Select **Date** to change the date, or to alter the date format. Select **Set**, to store new settings.

***Note:** The clock can also be adjusted from the Touch screen time display.*

- **Home menu shortcuts:** Select items from the displayed list to be highlighted, and enable the shortcut menus to appear on the **Home menu** screen.
Select **Clear** to deselect all the previous highlighted items and disable the shortcut menus from appearing on the **Home menu** screen. Alternatively, touch each highlighted item to deselect.
Select **Default** to enable the vehicle's predetermined shortcut menus to appear.
- **Language:** Select the required language. Touch **Change** to select alternative text displays. Follow the on-screen instructions to confirm.

***Note:** Some languages are not yet available for system display text.*

- **Volume presets:** Adjust volume for the available systems (announcements, parking aid, phone, navigation, etc.).

SELECTING VALET MODE

Valet mode allows the vehicle to be unlocked by a parking attendant, without giving access to the Luggage compartment and glove box.

Valet mode also prevents operation of the Touch screen, to prevent access to telephone numbers or navigation addresses.

1. From the **Home menu**, select **Valet**.
2. Enter a 4 digit Personal Identification Number (PIN) (personally chosen). On completion, touch the **Ok** soft key. Enter the PIN again to confirm.
3. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.
4. **Valet mode activated** is displayed to indicate that the PIN has been accepted.

The Luggage compartment and glove box are now securely locked in Valet mode and the **Valet mode On** screen is displayed.

Remove and retain the emergency key before giving the Smart key to an attendant.

DESELECTING VALET MODE

1. When you re-enter the vehicle, select **Valet**.
2. Enter your four digit PIN and touch the **Ok** button.

Valet mode deactivated is displayed to indicate that your PIN has been accepted.

- The Luggage compartment will return to the previously set security requirement.
- The Touch screen will be enabled.

Note: *If the PIN is forgotten, Valet mode can only be deactivated by your Dealer/Authorised Repairer.*

EXTRA FEATURES

This menu allows selected extra features to be displayed for adjustment or switched on/off.

For example:

- **Climate:** Enable/disable and adjust the climate settings.
- **Stealth:** Enable/disable the automatic operation of the interior lamps.

If there are more extra features available than can be displayed at any one time, they will be displayed in alphabetical order. Use the forward or back soft keys to move to the next screen.