

LIGHTING CONTROL



E132401



1. With the headlamps on, push the control away from the steering wheel to select high beam. The blue warning indicator in the Instrument panel will illuminate.
2. Pull the control towards the steering wheel and release to flash the high beam. The high beam will remain on for as long as the control is held.
3. Side lamps.
4. Headlamps.

Note: If the rotary control is moved to the **OFF** position with high beam selected, high beam will illuminate when the headlamps are turned on again.

5. **AUTO.** With the ignition on, if ambient light fades, the side lamps and headlamps will switch on automatically. If ambient light then increases, the side lamps and headlamps automatically switch off.

Note: A light sensor, on the front of the fascia, monitors ambient light levels for **AUTO** lamps operation. Keep the windscreen clean and make sure the sensor is not obscured. Obstructing the light in this area may lead to unwanted **AUTO** lamps operation.

Note: If the **AUTO** lamps are turned off, but the light sensors detect low exterior light levels, the warning **LIGHTS ARE OFF** is displayed in the Message centre.

6. Exit delay of 30 seconds.
7. Exit delay of 60 seconds.
8. Exit delay of 120 seconds.

Note: Press the headlamp button on the Smart key to switch off the headlamps during an Exit delay period.

DIRECTION INDICATORS

In addition to normal operation, the indicators will operate 3 times (e.g., to indicate a lane change) if the stalk is briefly pushed up or down.