


# Fluid level checks

## 5.0 litre and 3.0 litre petrol engines

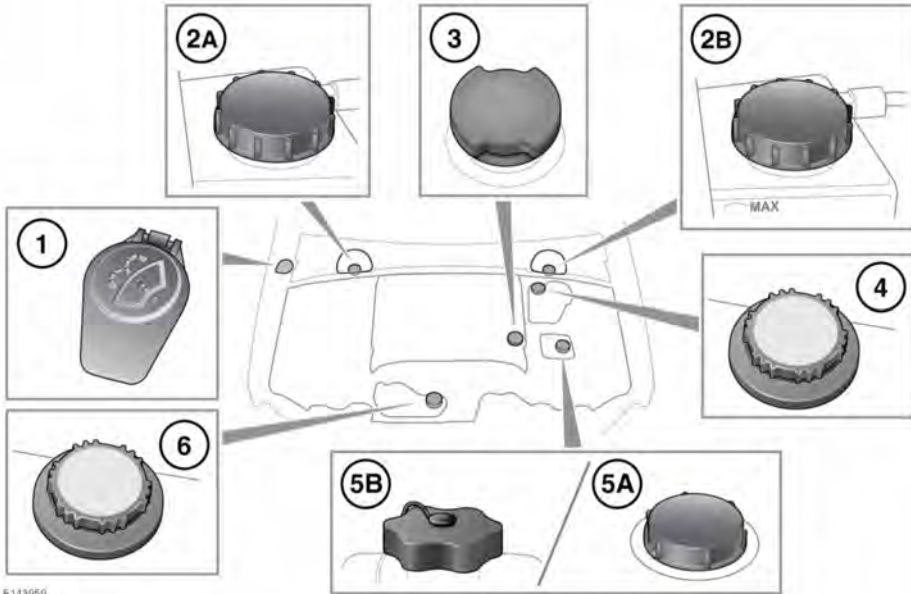

1. Washer fluid.
2. Brake fluid:
  - A. Right-hand drive vehicles.
  - B. Left-hand drive vehicles.
3. Engine oil.
4. Coolant (5.0L).
5. Power steering.
  - A. 5.0L.
  - B. 3.0L.
6. Coolant (3.0L).



**Do not drive the vehicle if there is a possibility that leaked fluid will come into contact with a hot surface, such as the exhaust.**

## CHECKING THE ENGINE OIL LEVEL



Check the engine oil weekly. If any significant or sudden drop in the oil level is noted, seek qualified assistance.

A certain amount of oil consumption is normal. The rate of consumption will depend on the following:

- The quality and viscosity of the oil.
- Climatic conditions.
- The speed at which the engine is being operated.
- Road conditions.

Drivers should expect above normal consumption when the engine is new and after running-in, if high speeds are sustained.

- !** If the message **ENGINE OIL PRESSURE LOW** is displayed, stop the engine as soon as it is safe to do so and seek qualified assistance. Do not start the engine until the cause has been rectified.


## All engines (except for 2.0 litre petrol engine)

Prior to checking the oil level make, sure that:

- The vehicle is on level ground.
- The engine oil has reached working temperature (oil is hot).
- The engine has been switched off for 10 minutes, as the system will not give an accurate reading until the oil level has stabilised.

The oil level can then be checked as follows:

1. Switch on the ignition (do not start the engine).
2. Make sure that transmission **P** is selected.
3. Repeatedly press the Trip button, on the end of the lighting control stalk (see **41, USING THE TRIP COMPUTER**), until the oil can icon, along with the current oil level status and topping up advice is displayed in the Message centre, as follows:

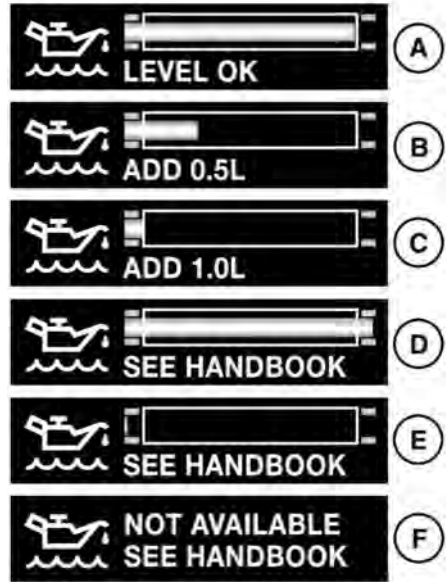

- A. Oil level at recommended level. No top up is required.
- B. Add 0.5 litres (0.9 pints) of oil.
- C. Add 1 litre (1.8 pints) of oil.
- D. Oil level is above the maximum amount for safe operation. Do not drive the vehicle. Seek qualified assistance.
- E. Oil level is below the minimum amount for safe operation. Add 1.5 litres (2.6 pints) of oil, then recheck the level.
- F. Oil level stabilising, oil level not available. Wait 10 minutes, then recheck the oil level display. If this display is accompanied by the warning message **ENGINE OIL LEVEL MONITOR SYSTEM FAULT**, seek qualified assistance.

## 2.0 litre petrol engines

Prior to checking the oil level, make sure:

- The vehicle is on level ground.