

# Warning lamps

## SIDE LAMPS (GREEN)



Illuminates when the side lamps are switched on.

## DIRECTION INDICATORS (GREEN)



The appropriate green lamp will flash when the column stalk is moved up or down to signal a turn.

If a direction signal is selected, and the bulb has failed, the audible ticking and green lamp will operate at twice the normal rate.

When the hazard warning lamps are activated, both lamps will flash.