

1. Select **Settings** from the **Climate** menu.
2. Touch the +/- buttons on the screen to increase/decrease sensitivity.

To switch off the air quality sensing, decrease sensitivity to the minimum setting.



The Auto recirculation icon appears on the Touch screen when the air quality sensor is switched on.

HEATED SEATS

Note: *The seat heaters will operate only when the engine is running.*

The Heated seats are controlled through the Touch screen.

To access the heating controls:

- Press the seat menu buttons on the fascia.
- Or, select from the **Climate** menu, select **Front seats**.

To adjust the seat temperature:

- Touch the relevant seat icon repeatedly, to select 1 of 3 temperature settings (as indicated by the red bars).
- If no bars are illuminated, the Heated seats are switched off.

CLIMATE SEATS

Note: *The Climate seats will operate only when the engine is running.*

Seat heating and ventilation is controlled from the **Home** or **Climate** menus on the Touch screen or by the seat menu button.

Heated ventilation:

- Touch the red arrow icon to switch heated ventilation on at a maximum (3 red bars).
- Touch the blue arrow icon once or twice to reduce the heated ventilation setting (2 and 1 red bars).

- Touch the blue arrow a third time to switch off the seat heated ventilation.

Cooled ventilation:

- Touch the blue arrow icon to switch cooled ventilation on at a maximum (3 blue bars).
- Touch the red arrow icon once or twice to reduce the cooled ventilation setting (2 and 1 blue bars).
- Touch the red arrow a third time to switch off the seat cooled ventilation.

To select seatback ventilation only:

- Select **Settings** from the **Climate** menu.
- Select the appropriate icon for full seat or seatback only ventilation.