

# Entering the vehicle

**To lock:** Make sure that all of the doors are closed, then turn the key blade towards the front of the vehicle and release. This will lock all of the doors, but will not arm the alarm.

## Replacing the door lock cover:

1. Align the cover to engage the bottom 2 clips.
2. Push the top of the cover to engage the upper clip.

## KEYLESS ENTRY



**Any person fitted with an implanted medical device should make sure that the device is kept at a distance of at least 23 cm (9 in) away from any transmitter mounted in the vehicle. This is to avoid any possibility of interference between the system and the device. For information concerning the locations of the security system transmitters, see 215, SMART KEY TRANSMITTER LOCATIONS.**



If a Smart key is lost, a replacement can be obtained and programmed to the vehicle by a Dealer/Authorised Repairer. Notify a Dealer/Authorised Repairer as soon as a Smart key is lost or stolen and have the remaining Smart key(s) reprogrammed.



The Smart key may not be detected if it is placed within a metal container, or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including in a laptop bag), games console, etc. Keep the Smart key clear of such devices when attempting Keyless entry or Keyless starting.

Keyless entry allows the vehicle to be unlocked and disarmed by simply operating the door handle, provided the Smart key is within 1.0 m (39 in).

The Smart key needs only to be on the driver's person, it does not need to be exposed or handled. However, the Smart key may not be detected if it is placed within a metallic container.

**Note:** *Keyless entry will unlock the vehicle in accordance with the current security setting (Single-point or Multi-point entry). However, if Single-point entry is the current setting and a door other than the driver's door is opened first, all of the doors will unlock.*

When all open doors have been closed, the system will search the vehicle's interior for a valid Smart key. If one is not detected, **SMART KEY NOT FOUND** will be displayed in the Message centre.

The security system fitted to your vehicle is Thatcham category 1 approved and meets EU regulations 97/116 and EU directive 95/56 EC.

## CONVENIENCE MODE

When the door is opened using either the Smart key or Keyless entry, the vehicle's electrical system initiates the Convenience mode. The following systems become functional:

- Driver position memory.
- Seat and steering column adjustment.
- Interior and exterior lighting.
- Message centre.
- Auxiliary power socket.

## GLOBAL OPENING

Press and hold the unlock button on the Smart key for 3 seconds. The vehicle will unlock and the alarm will be disarmed immediately. After 3 seconds, all of the windows and the sunroof will open.