

Portable media

1. Switch on your **Bluetooth** wireless technology device connection. Make sure that it is in **Bluetooth** wireless technology device discoverable mode, sometimes referred to as 'find me' mode (see your device's operating instructions for more information).
2. Switch on the ignition and make sure the Touch screen is active.
3. From the **Home menu**, select **Audio/Video**, then **My music/Source**.
4. Touch **Bluetooth**.
5. A menu will appear. Select **Change device**.
6. Select the **Vehicle to device** option.
7. Identify your device from the displayed list and select the corresponding **Pair and connect** option.
Note: If more than 5 devices are detected, it may be necessary to use the scroll bar to see the entire list.
8. When prompted, enter the PIN (Personal Identification Number) code into your device. See your device's operating instructions for more information.
9. Once your device is paired and connected to the system, a confirmation message will be displayed before switching to the **My media, Bluetooth** view.

*Note: Due to the duration of a **Bluetooth** wireless technology device search, it is advised that the time-out to home screen feature is switched off before attempting to search for **Bluetooth** wireless technology devices. This setting can be changed within **Setup, Screen, Time out home**.*

CHANGING/DISCONNECTING A DEVICE

1. Switch on the ignition and make sure that the Touch screen is active.

2. From the **Home menu**, select **Audio/Video**, then the **My music/Source** soft key.
3. Touch **Bluetooth**.
4. A menu will appear. Select **Change device**.
5. Select **Disconnect**. A confirmation pop-up will appear and then you will be given the option to **Search new** or select a different device from the list of paired devices.