

Video media player

6. Seek up: Select to view the next DVD chapter or to scroll through video media files.
7. Select to pre-stop playback. A second touch will stop and reset the DVD.
8. Select to start/restart play.
9. Seek down: Select to view the previous DVD chapter or to scroll through video media files.

VIDEO MEDIA INHIBIT WITH VEHICLE MOVING

When the vehicle is moving, the video picture will automatically be inhibited. The Touch screen will display the **TV/My video** screen and the relevant safety message will be displayed.

FULL SCREEN VIEW

When full screen mode is selected, the seek controls operate in the same manner as they do in preview mode.

Use the relevant soft key to select the **4:3**, **16:9** or **Zoom** option to magnify the picture.