



Steering wheel

ADJUSTING THE STEERING WHEEL

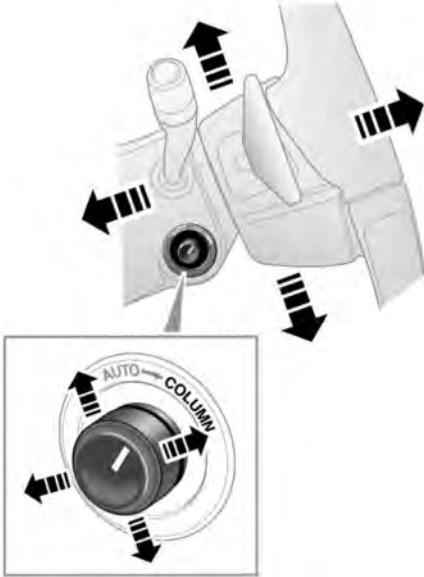

E143943

 **Never adjust the steering wheel while the vehicle is moving.**

 Do not use steering wheel mounted security devices. Movement of the steering wheel in Exit and Entry mode, could result in damage to the vehicle or possible injury to the occupant.

The steering wheel can be adjusted for tilt and reach as follows:

- Move the control forwards or rearwards to adjust reach.
- Move the switch up or down to adjust tilt.

Two steering wheel positions can be stored and recalled, along with seat and exterior mirror positions, by the driving position memory. See **18, DRIVING POSITION MEMORY**.

ENTRY AND EXIT MODE

With the steering wheel adjustment control in the **AUTO** position, the steering wheel will move to provide easier entry and exit from the vehicle, as follows:

- **Exit:** When the driver's door is opened, the steering wheel will move to the uppermost tilt position.
- **Entry:** When the driver's door is closed and the ignition is turned on, the steering wheel will return to its previously selected driving position.

Note: If the steering wheel adjustment control is moved away from **AUTO** when the wheel is in the **Exit** position, the steering wheel will still move back to its previous driving position when the driver's door is closed and the ignition is switched on.

Note: If the wheel is manually adjusted during **Entry** or **Exit** operation, movement will stop.

HEATED STEERING WHEEL



Touch this icon on the Touch screen Home or Climate menu, to activate the Heated steering wheel. Press again to turn off.