

Note: The following may affect the operation of High beam assist:

- Highly reflective road signs.
- Dimly lit road users, for example, cyclists and pedestrians.
- Adverse weather conditions, for example, fog, heavy rain, and snow.
- Dirty or obscured sensor.
- Dirty, damaged, or misted windscreen.
- Oncoming vehicles partially obscured by a central motorway barrier.

To turn off High beam assist, turn the rotary control from **AUTO** to headlamps on.

High beam assist can be disabled/enabled via the **Security/Vehicle** settings menu of the Touch screen. See **64, TOUCH SCREEN SETUP**.

Note: Make sure that the forward-facing sensor on the back of the rear-view mirror is not blocked or obstructed.

HEADLAMPS - DRIVING ABROAD

The headlamp beam pattern is suitable for driving on either side of the road. There is no need for any mechanical adjustment or external decals.

HEADLAMPS - CONDENSATION

In certain circumstances, misting may occur on the inside of a lamp lens. This is caused by natural changes in environmental conditions. This misting is not detrimental to lamp performance and will clear during normal usage.