



E152073

1. Connect the positive jump lead (red) to the positive terminal on the donor vehicle's battery.
2. Connect the other end of the positive jump lead to the positive (+) terminal on the disabled vehicle's battery.
3. Connect the negative jump lead (black) to the recommended jump starting earth point of the donor vehicle.
4. Connect the other end of the negative jump lead cable to the earth point on the disabled vehicle.
 - Check that all cables are clear of any moving components and that all 4 connections are secure.
5. Start the engine of the donor vehicle and allow it to idle for a few minutes.
6. Start the engine of the disabled vehicle.

Note: If repeated attempts to start the disabled vehicle are needed, allow the donor vehicle to idle for a few minutes between attempts.
7. Allow both vehicles to idle for 2 minutes.
8. Switch off the donor vehicle.

DISCONNECTING JUMP LEADS



To avoid serious injury, use extreme caution when removing the jump leads as the engine will be running on the previously disabled vehicle. This means that you may be working close to components which are moving at high speed, carry high voltage, or may be hot.

Note: Do not switch on any electrical equipment until after the leads have been disconnected.

The engine should be running on the previously disabled vehicle and the engine switched off on the donor vehicle. Disconnect the jump leads in the exact reverse order of that used for connection.

CONNECTING A STARTING AID

To start the vehicle using a starting aid or a slave battery, follow the instructions in the sequence given:

1. Connect the positive (Red) cable to the positive terminal of the disabled vehicle.
2. Connect the negative (Black) cable to the earth point of the disabled vehicle.
3. Connect/switch on the starting aid.
4. Start the engine and allow it to idle.
5. Disconnect/switch off the starting aid.
6. Disconnect the negative (Black) cable from the earth point of the vehicle.