

With manual seek mode activated, further short presses will change the radio frequency in single increments. A further long press will scan forwards through the current waveband until the button is released.

- 5. AUDIO VIDEO:** Press for direct access to the **Audio/Video** menu.
- 6. MODE:** Press repeatedly to scroll through all Audio/Video sources.
- 7. Seek down.** Short press:
 - To select the previous radio preset.
 - To select the previous track or start of current track on the chosen audio source - CD, MP3, etc.
 - To select the previous TV channel on the channel list or the previous DVD chapter.
 - When a paired telephone is in use, press to scroll down lists of calls or phonebook entries.Long press:
 - to manually seek down the frequency to the next radio station or to skip backwards through the current audio source track.
- 8.** CD/Digital Versatile Disc (DVD) eject button.
- 9.** Rotate to adjust volume for any source.
- 10.** Rotate and release repeatedly to scroll through:
 - The radio presets.
 - The previous track or the start of the next track on the chosen audio source - CD, MP3, etc.
- 11. MODE:** Press repeatedly to scroll through all the Audio/Video sources.
- 12.** Press to mute/un-mute audio when Telephone is not fitted. If Telephone is fitted, see **126, TELEPHONE SYSTEM OVERVIEW.**

AUDIO SETTINGS


To view the Audio settings menu, select the **Audio settings** soft key on the **Home menu** screen. See **102, AUDIO/VIDEO CONTROLS.**

To adjust the sound settings:

1. Touch the + or - soft keys to adjust the bass, treble or subwoofer levels.
2. If surround sound is fitted, touch **DPLIIx**, **DTS Neo:6**, **Meridian Trifield**, or select **Off** to switch surround sound off.

***Note:** Surround sound options are not available for certain sources where the surround sound mode is set automatically.*

To adjust balance and fade:

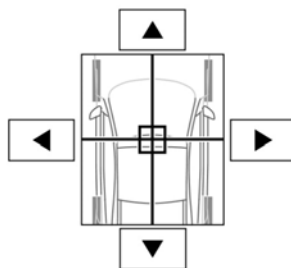

E132537

1. From the **Audio settings** menu, select **Balance/Fade**.
2. Touch the arrow soft keys to move the sound focal point to the desired area of the vehicle. Alternatively, touch the sound focal point and 'drag' it to the required position.

LOADING DISCS



Do not force the disc into the slot.



Do not use irregular shaped CDs or DVDs and those with a scratch protection film or self-adhesive label attached.