

# Entering the vehicle



Do not operate the tailgate if a cycle rack is fitted to the tailgate. Remove any cycles and/or racks before operating the tailgate.

1. Press to open the powered tailgate.
2. Press and release to close the Powered tailgate.

The tailgate can also be opened using the following methods:

- The interior tailgate release button.
- The Smart key tailgate release button.

**Note:** *The tailgate will not open if the vehicle is travelling at, or above, approximately 5 km/h (3 mph).*

**Note:** *When using the external release button (1), all of the doors must be unlocked and the transmission engaged in Park (P).*

**Note:** *If the Smart key is inadvertently left inside the Luggage compartment and the vehicle is locked and the alarm set, an audible warning will sound and the tailgate will re-open after 3 seconds.*

After the tailgate has opened, it can be manually lowered. If the tailgate fails to open or close correctly, close it manually, then press the tailgate release button again.

**Note:** *If a tailgate button is pressed while the tailgate is opening or closing, all movement will stop. However, if a button is pressed during the automatic locking stage, an open request will be ignored.*



**Before operating the tailgate, make sure that anyone in the vicinity does not have any part of their body in a position where it could be trapped. Note that the automatic locking action does not incorporate object detection. Death or serious injury could occur, even with an object detection system.**

**While the tailgate is open, the locking platform and latch are exposed. Do not manually close the latch as it may also automatically 'soft-close' and trap items or body parts.**

**Object detection while opening:** If an object is detected that would interfere with the tailgate opening, tailgate movement will stop. Remove any obstructions and press the tailgate button again to open.

**Object detection while closing:** If an object is detected that would interfere with the tailgate closing, tailgate movement will stop and then reverse a short distance. An audible warning will be given to indicate a mislock. Remove any obstructions and press the tailgate button again to close.

## TAILGATE OPENING HEIGHT

The maximum opening height can be set as required. This is useful in parking areas with low ceiling heights or just for ease of use.

1. Open the tailgate to the position which you want to set as the maximum height. Press either \*external tailgate control to stop movement, or position the tailgate manually.

**Note:** *\*Not the Smart key or interior release button.*

2. Make sure that the tailgate is stationary for at least 3 seconds.
3. To set the opening height, press and hold the close button on the tailgate until a chime sounds.
4. Close the tailgate, then open it again to check that it opens to the programmed height.

**Note:** *If, after performing part 3 of the process, the tailgate closes automatically, the required height has not been set. Repeat the process making sure that all steps are adhered to.*