


USING CRUISE CONTROL

⚠ In certain conditions, such as a steep gradient, the vehicle's speed may exceed the set cruising speed. This is because engine braking is unable to maintain or reduce the vehicle's speed. Driver intervention may be required.

⚠ Only use Cruise control when conditions are favourable (e.g., straight, dry, open roads, with light traffic).

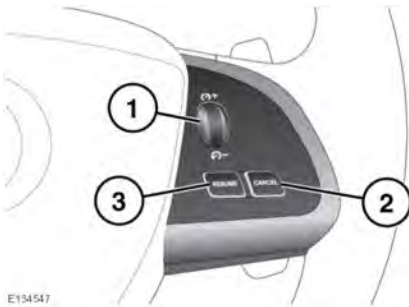

1. Set speed +/-: Roll the thumbwheel up or down to adjust the set speed. The set speed will be confirmed in the Message centre. The cruising speed can also be increased using the accelerator. When the desired speed is reached, roll the set speed control upwards to set and maintain the new speed. Release the accelerator.

Note: Cruise control can only be engaged at speeds in excess of 32 km/h (20 mph).

2. **CANCEL:** Press to cancel, but retain the set speed in the memory. Cruise control will also be cancelled if; the brake pedal is pressed, the rotary gear selector is moved to **N** or **R**, or if Dynamic mode is activated.
3. **RESUME:** Press to resume the set speed.

ⓘ **RESUME** should be used only if the driver is aware of the set speed and intends to return to it.

Note: If the set speed is exceeded for more than 5 minutes by use of the accelerator, Cruise control will be cancelled.

The driver can also intervene, at any time, by use of the brake or accelerator pedals.

Cruise control will switch off and clear the memory when the ignition is switched off.