

The Luggage compartment and glove box are now securely locked in Valet mode and the **Valet mode On** screen is displayed.

## DESELECTING VALET MODE

1. When you re-enter the vehicle, select **Valet**.
2. Enter your memorable 4 digit PIN and touch the **OK** soft key.

**Valet mode deactivated** is displayed to indicate that a PIN has been accepted.

- The Luggage compartment and glove box will return to the previously set security requirement.
- The Touch screen will be enabled.

**Note:** *If the PIN is forgotten, Valet mode can only be deactivated by your Dealer/Authorised Repairer.*