

## DYNAMIC STABILITY CONTROL (DSC)



**Dynamic Stability Control (DSC) is unable to compensate for driver misjudgement. It remains the driver's responsibility to drive with due care and attention, in a manner which is safe for the vehicle, its occupants and the other road users.**

DSC is activated automatically when the ignition is switched on. It controls vehicle stability in critical driving situations. Additionally, it identifies unstable driving behaviour, such as understeer or oversteer, and helps to keep the vehicle under control by manipulating the engine power output and applying the brakes at individual wheels. Some noise may be generated when the brakes are applied.

If wheel spin is detected, the system will intervene to control it by reducing engine power output and applying the brakes at individual wheels. This action will help to improve acceleration.

Also see, **44, DYNAMIC STABILITY CONTROL (DSC) (AMBER)**.

## WINTER MODE

Winter mode enhances stability of the vehicle to suit slippery conditions, when grip is reduced. This helps the vehicle to perform in a more gentle and controlled manner, to avoid skidding, allowing more confident progress under adverse conditions.



Press to operate. Designed for use in slippery conditions. When active, Winter mode selects 2nd gear for driving away on level ground (no incline), softens the responsiveness of the engine, and modifies the gear change strategy. This makes sure that enhanced traction is maintained.

**Note:** Winter mode cannot be active at the same time as Dynamic mode. Winter mode will remain selected indefinitely, even after the ignition is switched off. Winter mode must be deselected, if no longer required.

## DYNAMIC MODE

Dynamic mode enhances key vehicle systems so that the vehicle's full potential can be exploited. The vehicle's responses are aimed at involving the driver more in focused and purposeful driving.



Press to operate. Dynamic mode coordinates the vehicle's control systems to deliver a high performance driving experience.

**Note:** When the transmission is set to permanent Manual mode and Dynamic mode is selected, transmission upshifts are fully controlled by the driver. The transmission will not change up automatically, even when the rev limit is reached (the gear position indicator in the Message centre will glow amber, to indicate that the next gear should be selected).

**Note:** Dynamic mode cannot be active at the same time as Winter mode. Dynamic mode will remain selected for approximately 6 hours after the ignition is switched off, after which point it will need to be reselected, if required.

## TRACDSC



**Vehicle safety may be reduced by inappropriate use of TracDSC. TracDSC should only be used in suitable conditions.**