

Exterior lights

DAYLIGHT RUNNING LAMPS

With the rotary control in the **OFF** or **AUTO** position, the Daylight running lamps will switch on automatically with the following conditions:

- The ignition is on.
- The engine is running.
- The gear selector is in **D** or **R** position - market dependent.

Note: *The lamps remain on if the gear selector is subsequently moved to **N**.*

- The Parking brake is not applied (is released) - market dependent.

APPROACH LAMPS

The headlamps can be illuminated remotely for a programmed length of time, by pressing the headlamp button on the Smart key. See **4, UNLOCKING THE VEHICLE**. Press the button again to switch off.

Note: *In some markets, a second press will illuminate the reverse lamps and a third press is required to turn the lamps off.*

ADAPTIVE FRONT LIGHTING SYSTEM (AFS)

These lamps broaden the beam of the headlamps when cornering in different circumstances.

Static bending lamps: The static bending lamps operate when necessary, to provide an even broader light spread.

Cornering lamps: At speeds of up to 40 km/h (25 mph), to provide improved visibility at junctions, the system switches on the lamp if it has received an input from the vehicle's direction indicator. Only the lamp on the same side as the operating indicator illuminates. The lamp will self cancel after 3 minutes of continuous operation.

WINDSCREEN WIPER DETECTION

This function only operates when **AUTO** lamps is selected. The side lamps, tail lamps, and headlamps will switch on automatically if the windscreen wipers are operated for 20 wipes or more. Once the windscreen wipers are switched off, the side lamps, tail lamps, and headlamps will automatically switch off 4 minutes later.

HIGH BEAM ASSIST

This feature automatically selects and deselects high beam, under specific conditions of road lighting and in the absence of other vehicle's lights.

High beam assist is active only when:

- the lighting control is in the central position and the rotary control is in the **AUTO** position.
- ambient light drops below a predetermined level.
- vehicle speed exceeds 40 km/h (25 mph). The system will deactivate when the vehicle's speed drops below 24 km/h (15 mph).

Note: *High beam assist does not operate when transmission **R** is selected.*

To manually select high beam, move the lighting control to the high beam position as normal. To return to High beam assist, move the lighting control back to the central position.

To manually override to low beam from High beam assist, pull the lighting control to the flash position. High beam assist will be cancelled. To return to High beam assist, push the lighting control to the high beam position and then return it to the central position.

When High beam assist is enabled, the warning lamp will illuminate. See **43, WARNING LAMPS AND INDICATORS**.